


2.2 Create a Playlist

To create a playlist:

- Click the create playlist button at the top of the DS Playlist main menu.

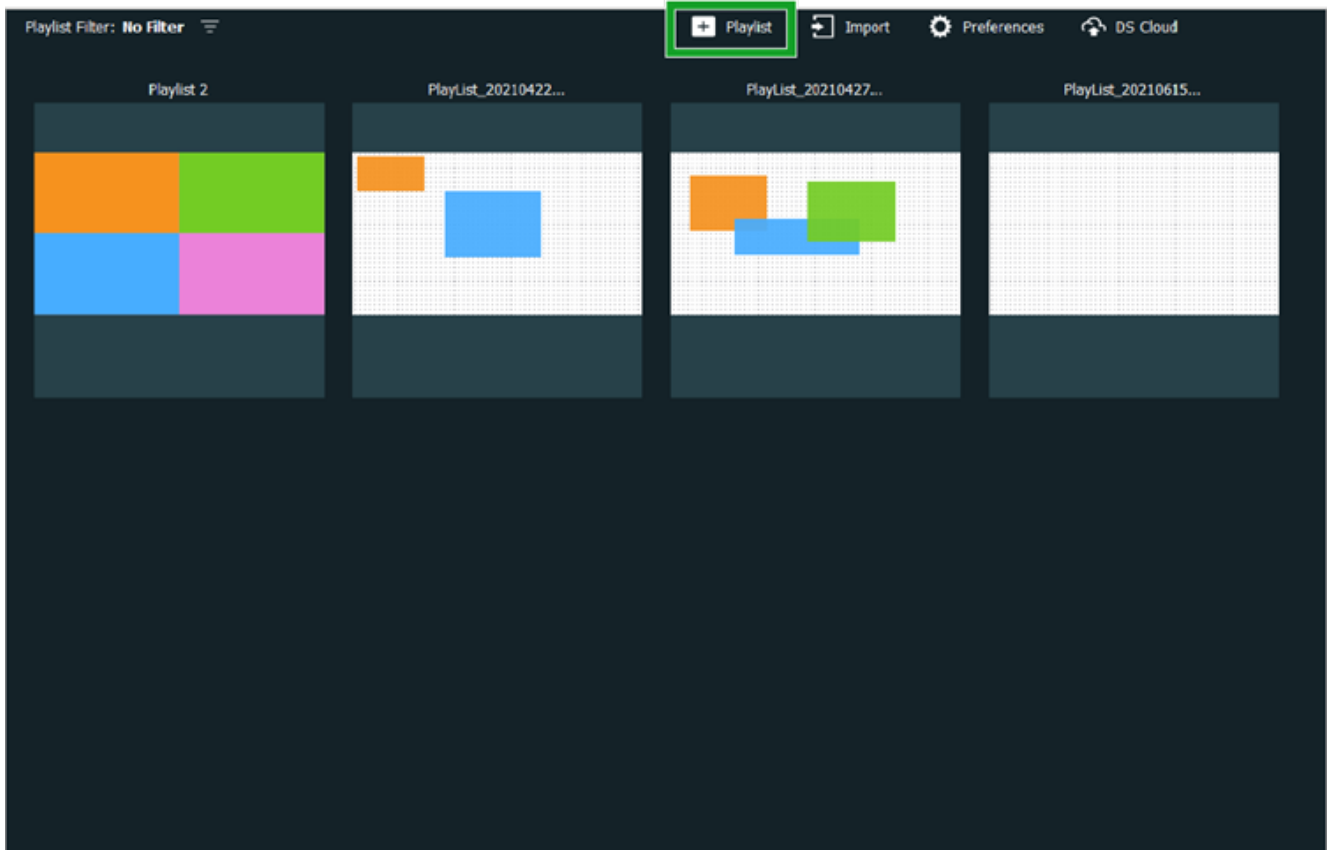

- In the **Create a Playlist** pop-up menu, select an option for each of the following settings for the playlist and then click **OK**:

Create A Playlist

Model ☐ NovoDS Mini ☒ NovoDS ☐ NovoDS 4K
☐ NC-X700 ☐ NC-X900
☐ NovoDisplay ☐ NovoTouch LK ☐ NovoTouch EK

Screen Orientation ☒ Landscape ☐ Portrait
☐ Landscape(Flipped) ☐ Portrait(Flipped)

Layout Preference ☒ Grid(Default) ☐ Flexible

Ok Cancel

- **Model:** Select the Novo device you want the playlist to be played on.
- **Screen Orientation:** Select the screen orientation of the display which the playlist will be played on. Orientations labelled “(Flipped)” are for displays whose videos are reflected on a mirror.
- **Layout Preference:** Choose the type of playlist format you want to use.

NOTE: The layout type (Grid or Flexible) selected in this field will be the layout type for ALL of the pages in your playlist. DS Playlist does not allow mixing and matching layout types within a playlist.

If you selected **Grid** in the **Layout Preference** setting, go to *Using Grid Mode* for further instructions. If you selected **Flexible** in the **Layout Preference** setting, go to *Using Flexible Mode* for further instructions.