


## 2.4 Settings

In the 'Settings", you can configure below items depends on your requirement.

Category	Item	Note
General	Room Name	
	Auto-Start NovoConnect Stage	After the option be activated, NovoConnect Stage will launch automatically when enter Windows OS system.
	Background Image	
	Logo & Welcome Message	
Configuration	Connection Display Settings	Ex: Ethernet, Wi-Fi, Meeting ID, PIN code
	Screen-Cast Configuration	Ex: Enable Airplay & code.
	Calendar Display Settings	Ex: Subject, Location, Organizer
	Setting Lock	

Configuration table

In additional, you also can pair Launcher for wireless screen mirroring, update software and enable software license.

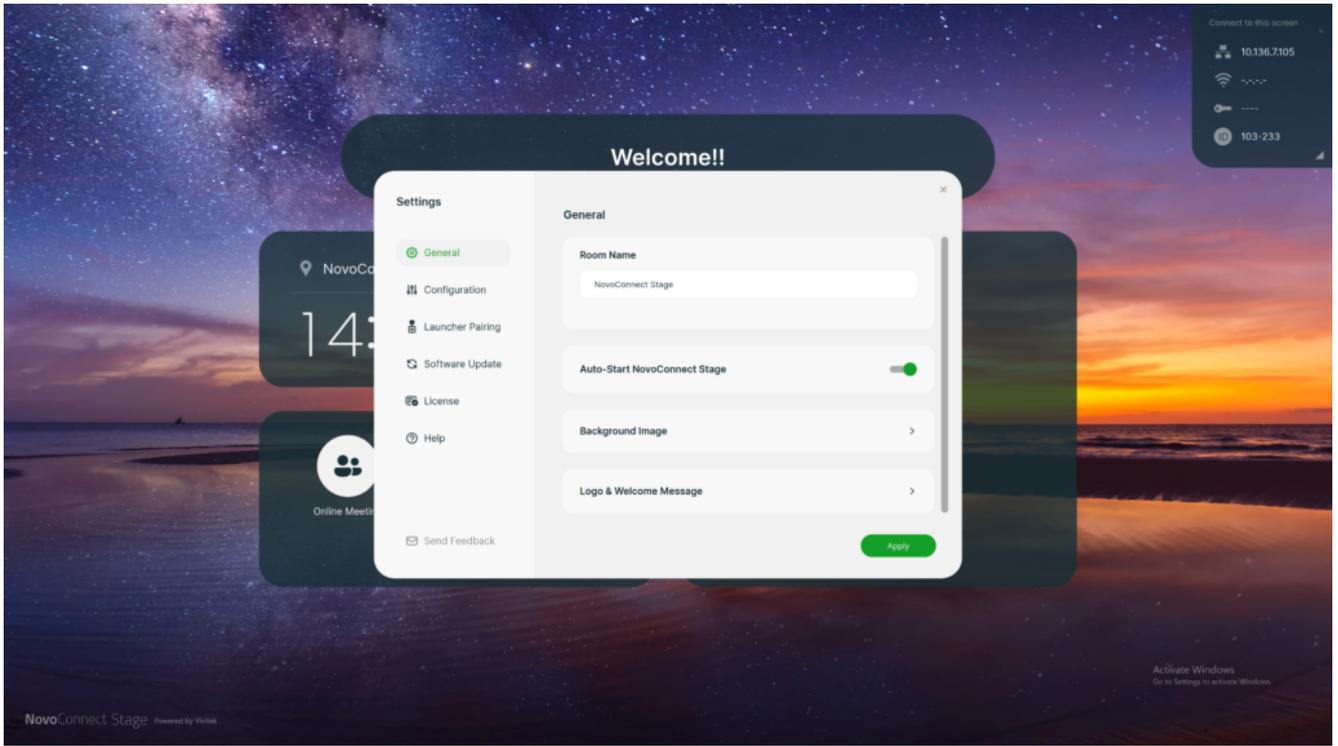

## Settings