


## 2.6.2 Tab “Pages”

Select the **Pages** tab at the bottom of the editing menu’s side panel to access the pages panel and add or edit multiple pages in your playlist.

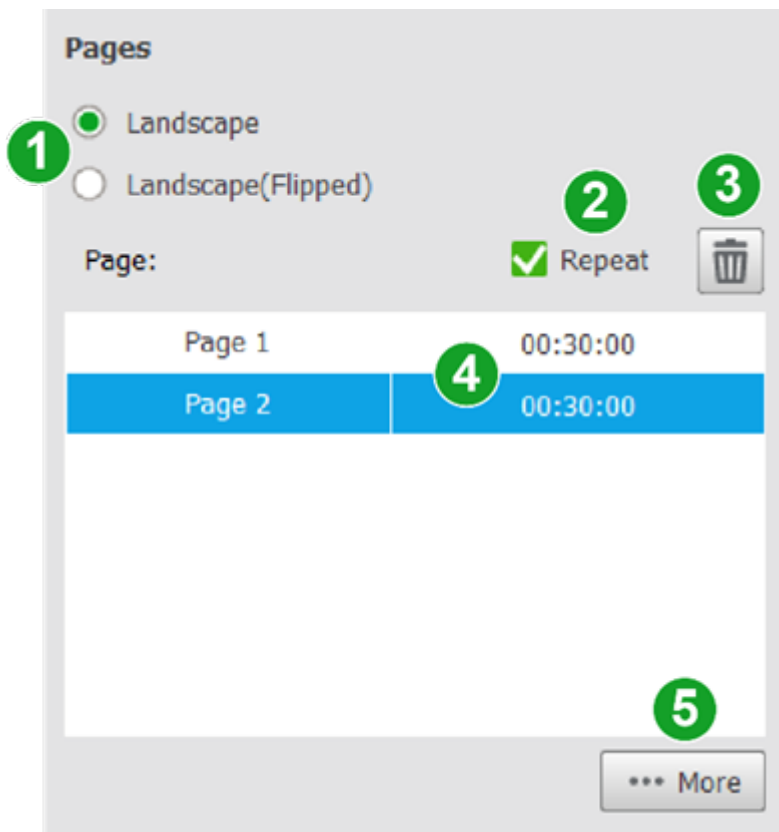

The following options are available in the pages panel:

No.	Item	Description
1	Orientation	Select <b>Landscape</b> to set the playlist to broadcast in normal landscape orientation. Select <b>Landscape (Flipped)</b> set the playlist to broadcast in a mirrored landscape orientation for images that will be reflected off a mirror.
2	Repeat	Check this box if you want the playlist to repeat after it has finished playing.
3	Delete	Select a page in the page menu and click this button to delete the page from the playlist.

4	Page List	<p>Lists all the pages in your playlist.</p> <p><b>Click</b> a page to view the main editing panel for the respective page. Go to <i>The Editing Panel</i> for more details regarding the editing panel.</p> <p><b>Click</b> and drag on a page to re-order the page sequence.</p> <p><b>Double-click</b> the time for a page to edit the duration for which the page will be displayed.</p>
5	More	<p>Click and select one of the following options to add a page to the playlist:</p> <p><b>Page</b> – Adds a new page to the playlist. Once selected follow the instructions in <i>Using Grid Mode</i> or <i>Using Flexible Mode</i> to select the template for the new page.</p> <p><b>Link</b> – Adds a copy of an already created page to the playlist.</p> <p><b>Import</b> – Imports a page from another playlist.</p>