
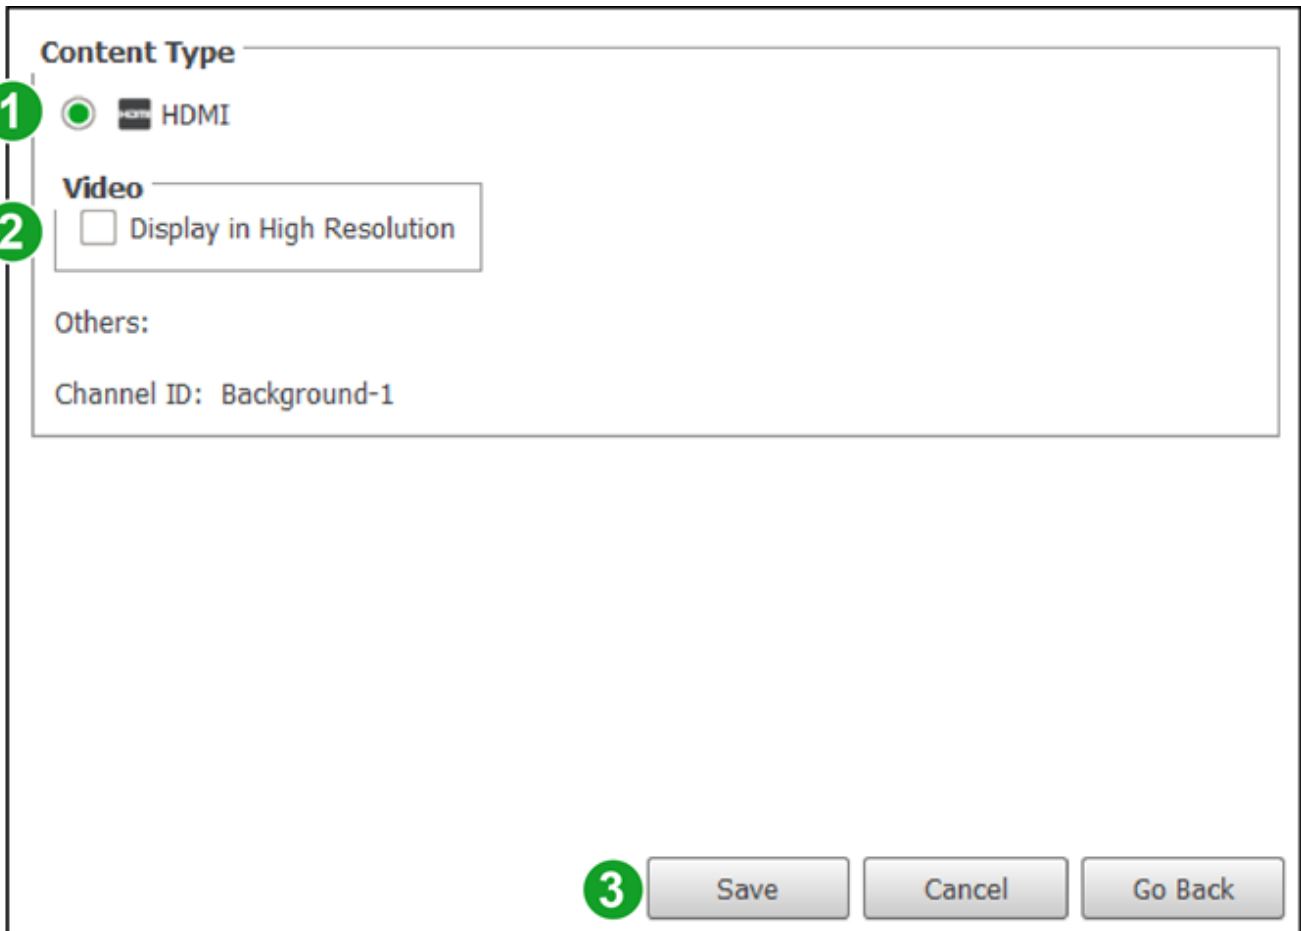


## 2.6.3.3 Video In Background

When you select video in (  ) for a background design, an editing menu will appear for the type video input. Follow the steps below to make video from an HDMI device or a webcam video stream the background:



The screenshot shows a configuration dialog box for video input. It has a title bar with a close button (X). The main content area is divided into sections. The first section, labeled 'Content Type', contains a radio button selected for 'HDMI'. The second section, labeled 'Video', contains a checkbox for 'Display in High Resolution'. Below this is an 'Others:' section with a text field containing 'Channel ID: Background-1'. At the bottom right, there are three buttons: 'Save', 'Cancel', and 'Go Back'. Three green circular callouts with numbers 1, 2, and 3 point to the 'HDMI' radio button, the 'Display in High Resolution' checkbox, and the 'Save' button respectively.

1. Select either **HDMI** or **USB Camera** depending on the type of device connected.
2. Check **Display in High Resolution** have the video be shown in High Resolution
3. Click **Save** to finish configuring the background settings.

