
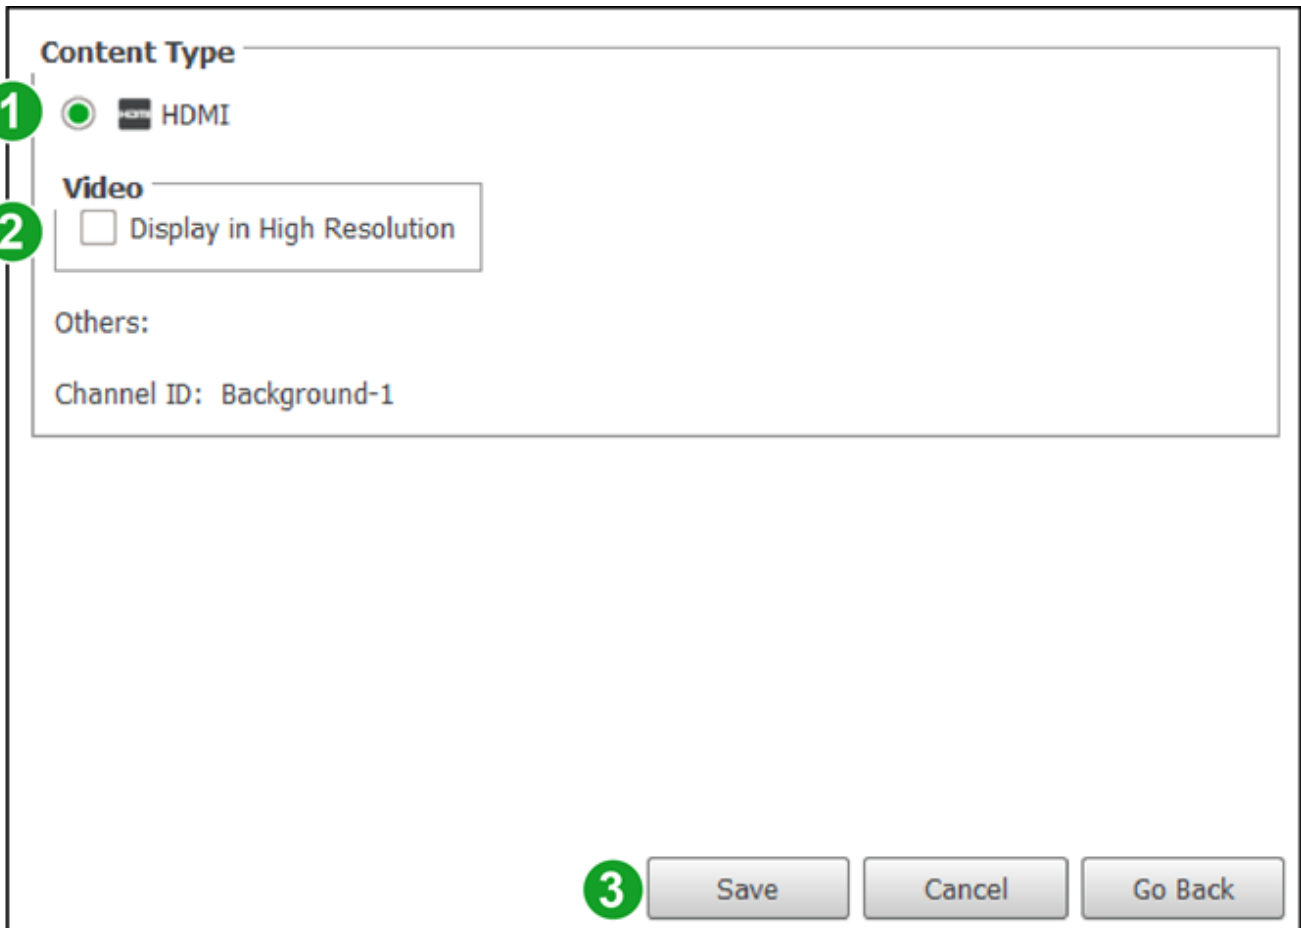


## 2.6.3.3 Video In Background

When you select video in (  ) for a background design, an editing menu will appear for the type video input. Follow the steps below to make video from an HDMI device or a webcam video stream the background:



The screenshot shows a configuration window titled "Content Type". It contains a "Video" section with a "Display in High Resolution" checkbox. Below this is an "Others:" section with a "Channel ID" field set to "Background-1". At the bottom are "Save", "Cancel", and "Go Back" buttons. Three green numbered circles (1, 2, 3) are overlaid on the image to indicate the steps: 1 points to the "HDMI" radio button, 2 points to the "Display in High Resolution" checkbox, and 3 points to the "Save" button.

**Content Type**

1 ☒ HDMI

**Video**

2 ☐ Display in High Resolution

Others:

Channel ID: Background-1

3

1. Select either **HDMI** or **USB Camera** depending on the type of device connected.
2. Check **Display in High Resolution** have the video be shown in High Resolution
3. Click **Save** to finish configuring the background settings.

