
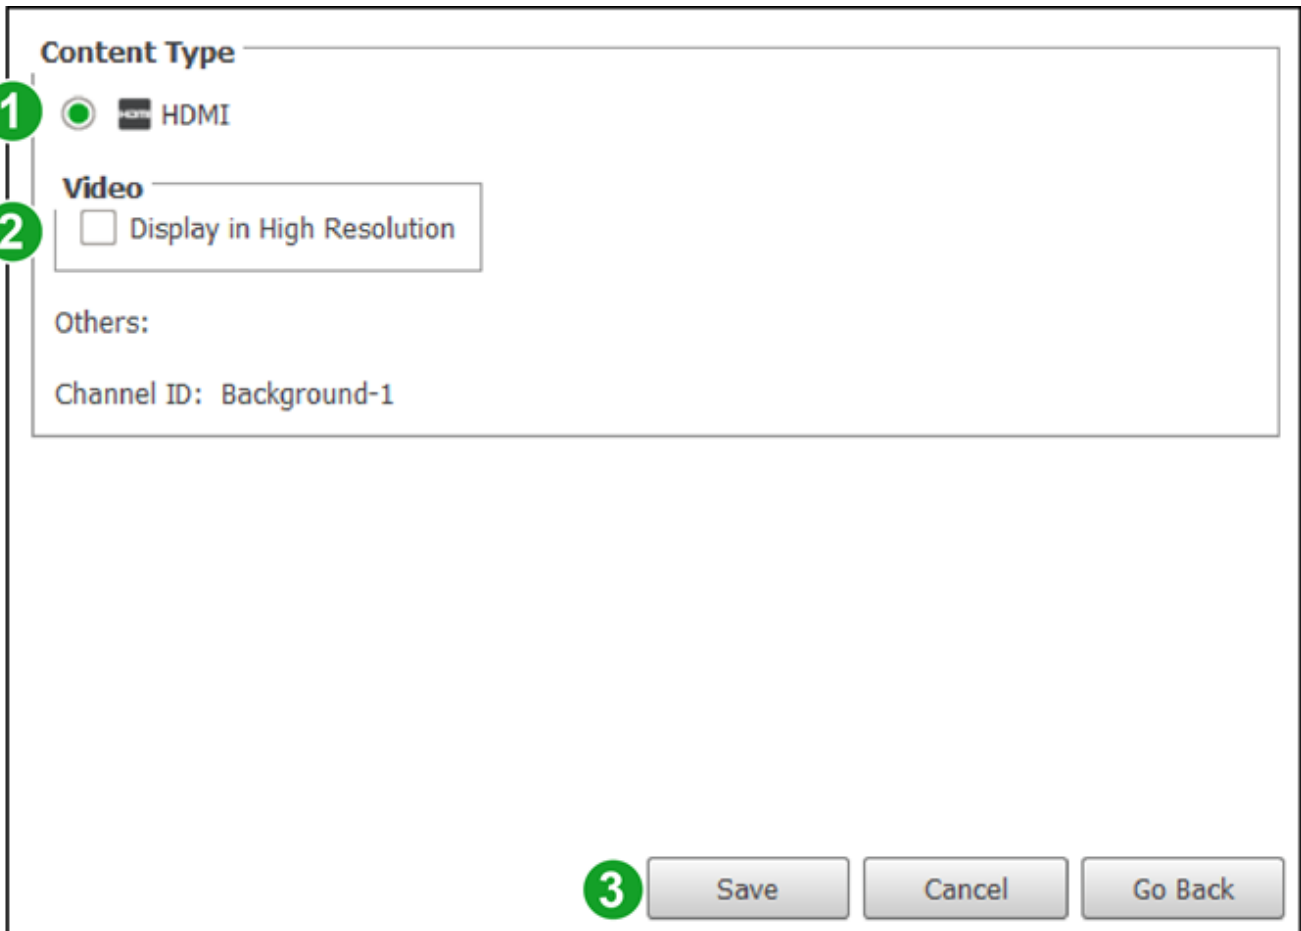


2.6.3.3 Video In Background

When you select video in () for a background design, an editing menu will appear for the type video input. Follow the steps below to make video from an HDMI device or a webcam video stream the background:



The screenshot shows a configuration window for video input. The window title is "Content Type". It features a radio button selection for "HDMI" (indicated by a green circle with the number 1). Below this is a "Video" section containing a checkbox for "Display in High Resolution" (indicated by a green circle with the number 2). Underneath is an "Others:" section with the text "Channel ID: Background-1". At the bottom of the window are three buttons: "Save" (indicated by a green circle with the number 3), "Cancel", and "Go Back".

1. Select either **HDMI** or **USB Camera** depending on the type of device connected.
2. Check **Display in High Resolution** have the video be shown in High Resolution
3. Click **Save** to finish configuring the background settings.

