

2.7.5 Web Page

To display a web page in a layout item/box click the web page button (Browser) in the bar to the left of the content menu, and the web page menu will appear. Follow the instructions below to configure the display settings for the web page.

The image shows a configuration dialog box for a web page. It is divided into two main sections: 'General' and 'Content'. The 'General' section includes settings for 'Refresh Period' (radio buttons for 'Never' and a dropdown for '01:30:00'), 'Display Mode' (radio buttons for 'Default' and 'Wide View'), 'Webpage Version' (radio buttons for 'Mobile' and 'Desktop'), and 'Enhanced Rendering' (radio buttons for 'Enabled' and 'Disabled'). There are also checkboxes for 'Hide page loading progress', 'Block pop-ups', and 'Add button 'Go Back''. The 'Content' section has radio buttons for 'Online Link' and 'Offline Content', with a text input field for the URL 'https://www.vivitekusa.com/'. At the bottom, there are 'Save', 'Cancel', and 'Go Back' buttons. Seven green circular callouts with numbers 1 through 7 point to specific elements: 1 points to the 'Refresh Period' dropdown, 2 to the 'Display Mode' radio buttons, 3 to the 'Webpage Version' radio buttons, 4 to the 'Enhanced Rendering' radio buttons, 5 to the 'Hide page loading progress' checkbox, 6 to the 'Online Link' radio button, and 7 to the 'Save' button.

1. In the **Refresh Period** field, set the amount of time you want to pass before the web page is refreshed, or select **Never** if you do not want the web page to refresh.
2. In the **Display Mode** field, select the if you want the web page to be displayed in its default mode or in a wide view.

3. In the **Webpage Version** field, select which version of the web page you want displayed.
4. In the **Enhanced Rendering** field, select whether or not you want the web page shown in enhanced resolution.
5. In the **Others** field check any of the following options:
 - **Hide page loading progress** – Does not show the loading progress each time the web page is refreshed.
 - **Block pop-ups** – Blocks and pop-up windows from the web page.
 - **Add Button “Go Back”** – Adds a “Go Back” button in the layout box whose placement within the box can be chosen from nine pre-set locations.
6. In the **Content** section, choose one of the following options:
 - To display a web page that is currently available on the Internet, select **Online Link**, then enter the URL for the web page into the field below, and then click the refresh button () to load a preview of the web page into the **Content** window.
 - To display an offline web page that is saved on your local storage, select **Offline Content**, then click the more button () to select the file for the web page in your local storage.
7. Click **Save** to finish configuring the web page settings.