3.14 Clear History

Software Setup

Step 1. In the NT Launcher home screen, tap the button at the bottom-right corner.

Clear History				
The following data will be cleared. Delete Tasks - Note, NT Minutes				
Folders - /Notes, /Movies/NT-Minutes, /Snipping	CANCEL			
	CAROLL			8
			APP -	
		ALCON.		

Step 2. Tap CONFIGURE to enter the Configuration menu.

	Auto-Clear Clear your preferences every time you press power button or enter sleep mode	
	Delete Tasks	
	Folders 	
	Clear Accounts	
Þ		

Step 3. The following options will be shown:

• Auto-Clear:

When enabled, the display will clear its history anytime the power button is pressed or the display enters sleep mode.

• Delete Tasks:

Allows you to remove any of the third-party apps shown from the recently used apps list.

<	Clear History	- Delete Tasks	
	S	Browser	
	- +	Calculator	
		Cloud Drive	

• Folders:

Tap + to add a folder to the list of folders to clear.

< c	clear History - Folders	+
	/Notes	
	/Movies/NT-Minutes	
	/Snipping	

After selecting a folder, you can choose whether to delete the folder entirely or just clear the folder of its contents.

< /١	Movies/NT-Minutes
	Remove all content in this folder
	Remove this item

• User Data:

Allows you to clear a third-party app of its user information.

< ci	ear History - User Data	
	Browser	3
	Calculator	3
	Cloud Drive	2

• Clear Accounts:

Allows you to clear any accounts from the system.



Step 4. Tap < to return to the **Configuration** menu.

Step 5. Repeat step 1 and tap **Apply** to begin clearing the history. If **Auto-Clear** has been enabled, press the power button on the display.

Ⅲ < >