



3.16 Screen Lock

The NovoTouch **Screen Lock** app allows you to activate a 4-digit screen lock password.

Step 1. Go to **More App** → tap **NT Settings**

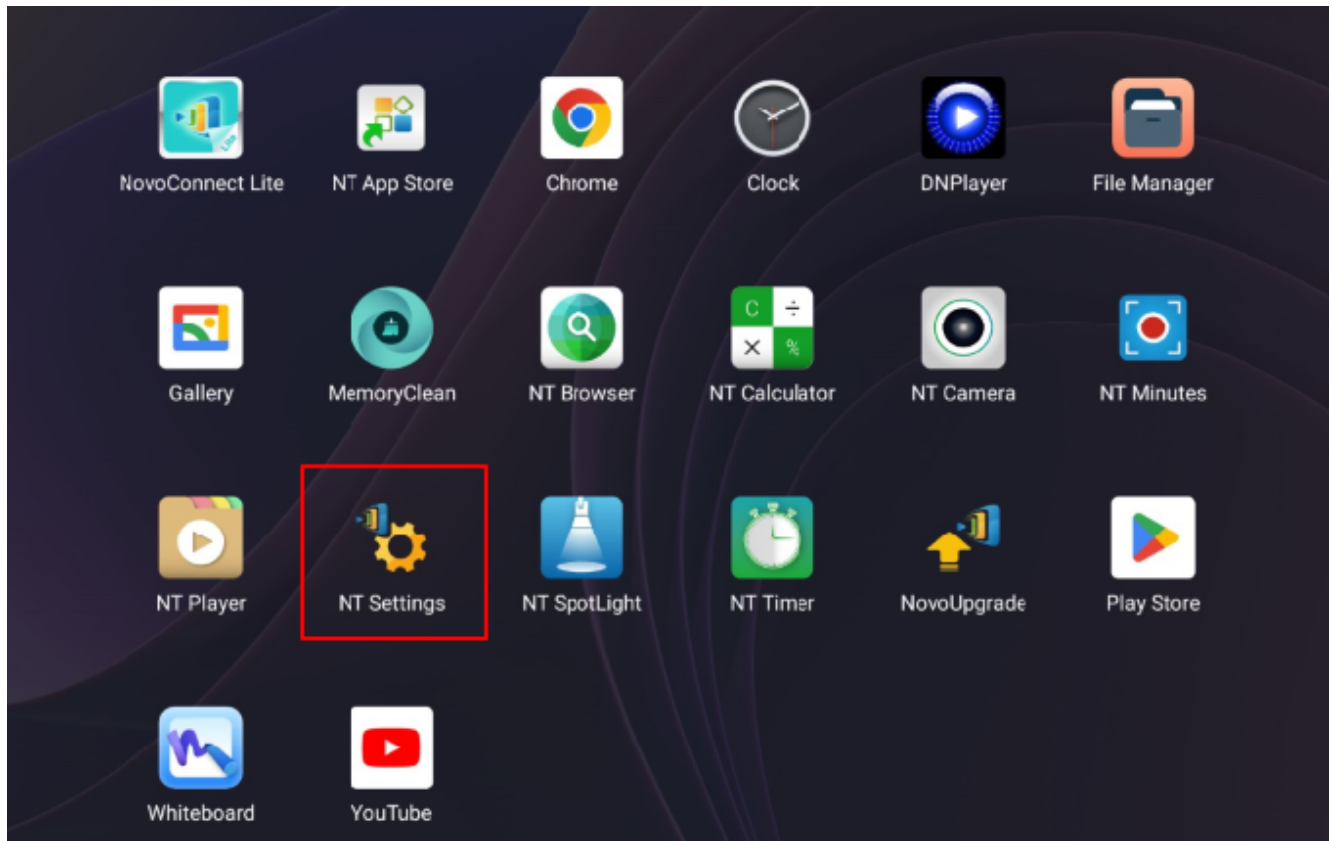

Step 2. Tap **General** to enter configuration

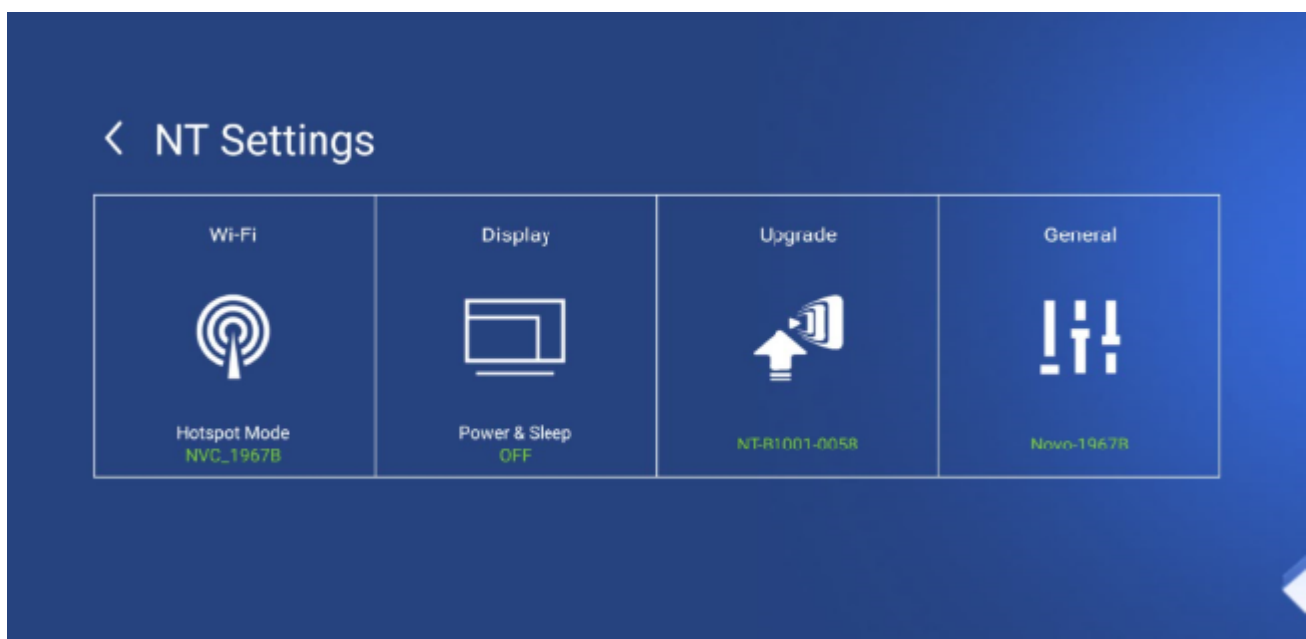

Step 3. Active or Deactive **Screen Lock** in the configuration.

The screenshot shows a configuration interface with two main sections: 'Device Settings' and 'Remote Manager Cloud'. In the 'Device Settings' section, 'Screen Lock' is set to 'ON' and is highlighted with a red box. Other settings include 'Room Name' (Novo-1967B), 'Settings Lock' (OFF), 'Log Download' (OFF), and 'SysControl' (OFF). The 'Remote Manager Cloud' section shows 'Cloud Service' (OFF), 'Device ID' (RESET), and 'Device Status' (Disable). At the bottom, there is an 'Android Settings' button with a gear icon and the text 'Set'.

Step 4. In the configuration page, select Enable/Disable **Screen Lock**.

Step 5. Select **Enable**, and set 4-digits password(only numeric is allowed), then tap **Apply** to save the password.

The screenshot shows a 'Screen Lock' dialog box with a blue header. It has two radio buttons: 'Disable' and 'Enable', with 'Enable' selected. Below the radio buttons are two input fields for a PIN code, both containing '****'. The first field is labeled 'Create Screen Lock PIN code' and the second is labeled 'Enter PIN code again'. At the bottom, there are two buttons: 'Apply' and 'Cancel'.

Step 6. **PIN Code** is required to enter every time when power on the device. .

