



3.16 Screen Lock

The NovoTouch **Screen Lock** app allows you to activate a 4-digit screen lock password.

Step 1. Go to **More App** → tap **NT Settings**

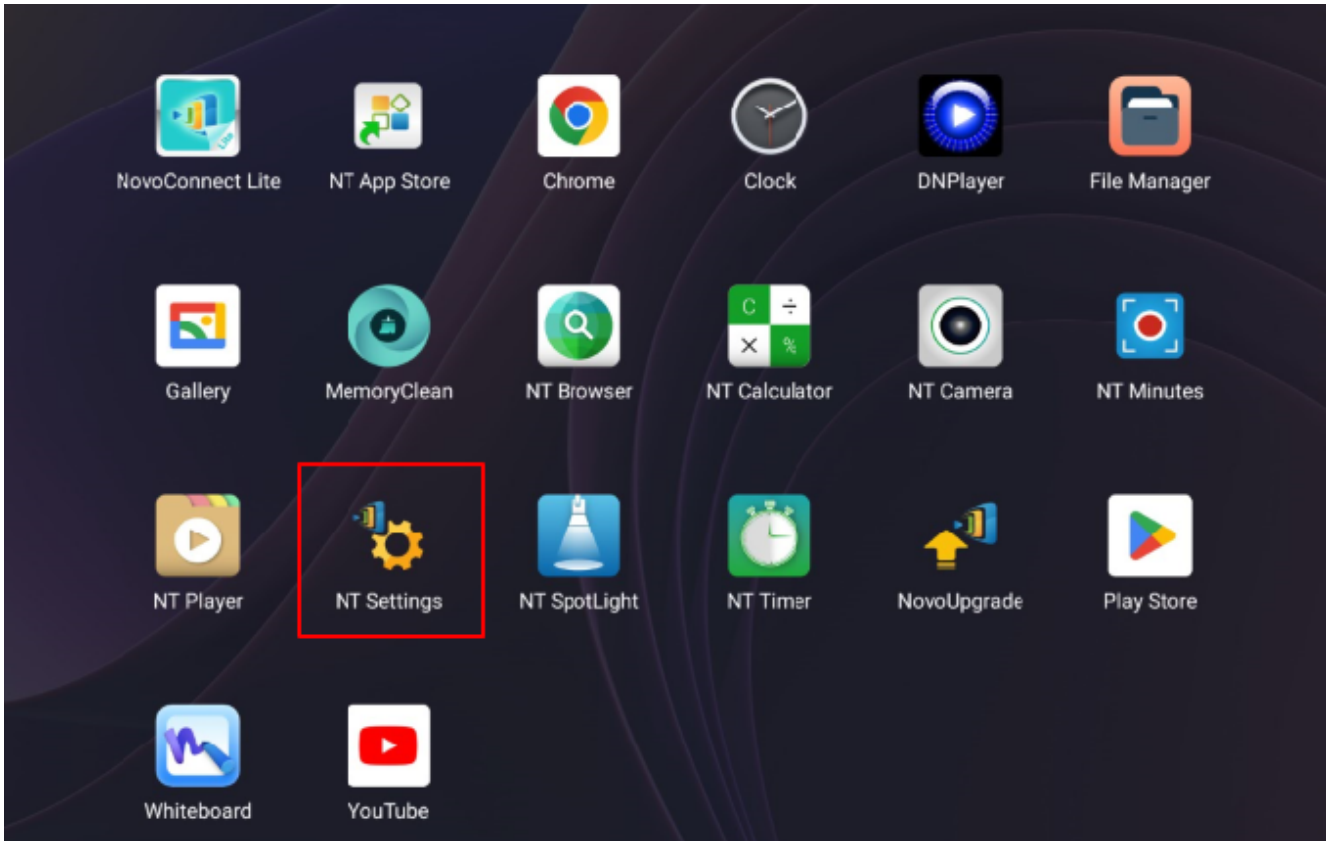

Step 2. Tap **General** to enter configuration

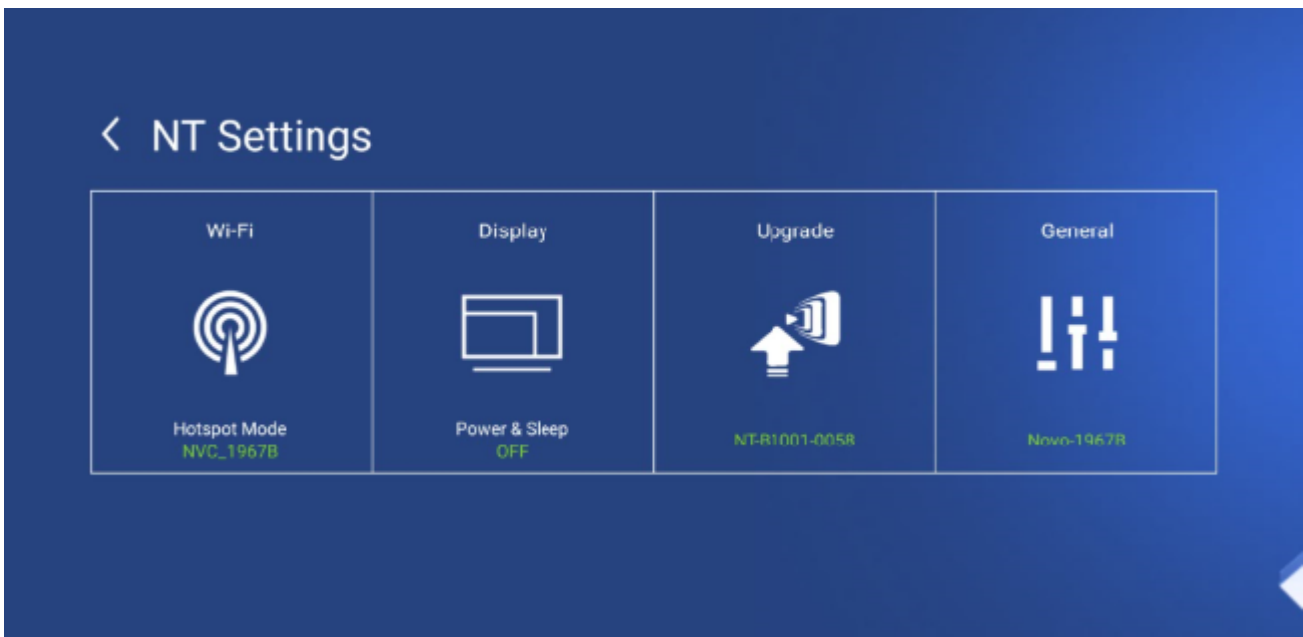

Step 3. Active or Deactive **Screen Lock** in the configuration.


The screenshot shows a configuration interface with two main sections: 'Device Settings' and 'Remote Manager Cloud'. Under 'Device Settings', there are several toggle switches: 'Room Name' (Novo-1967B), 'Settings Lock' (OFF), 'Screen Lock' (ON, highlighted with a red box), 'Log Download' (OFF), and 'SysControl' (OFF). Under 'Remote Manager Cloud', there are 'Cloud Service' (OFF) and 'Device ID' (RESET) buttons. At the bottom, there is an 'Android Settings' section with a 'Set' button. The 'Device Status' is shown as 'Disable'.

Step 4. In the configuration page, select Enable/Disable **Screen Lock**.

Step 5. Select **Enable**, and set 4-digits password(only numeric is allowed), then tap **Apply** to save the password.

The screenshot shows a 'Screen Lock' dialog box. At the top, there is a back arrow and the title 'Screen Lock'. Below the title, there are two radio buttons: 'Disable' (unselected) and 'Enable' (selected). Underneath, there are two input fields for a PIN code. The first field is labeled 'Create Screen Lock PIN code' and the second is labeled 'Enter PIN code again'. Both fields contain four asterisks. At the bottom of the dialog, there are two buttons: 'Apply' and 'Cancel'.

Step 6. **PIN Code** is required to enter every time when power on the device. .

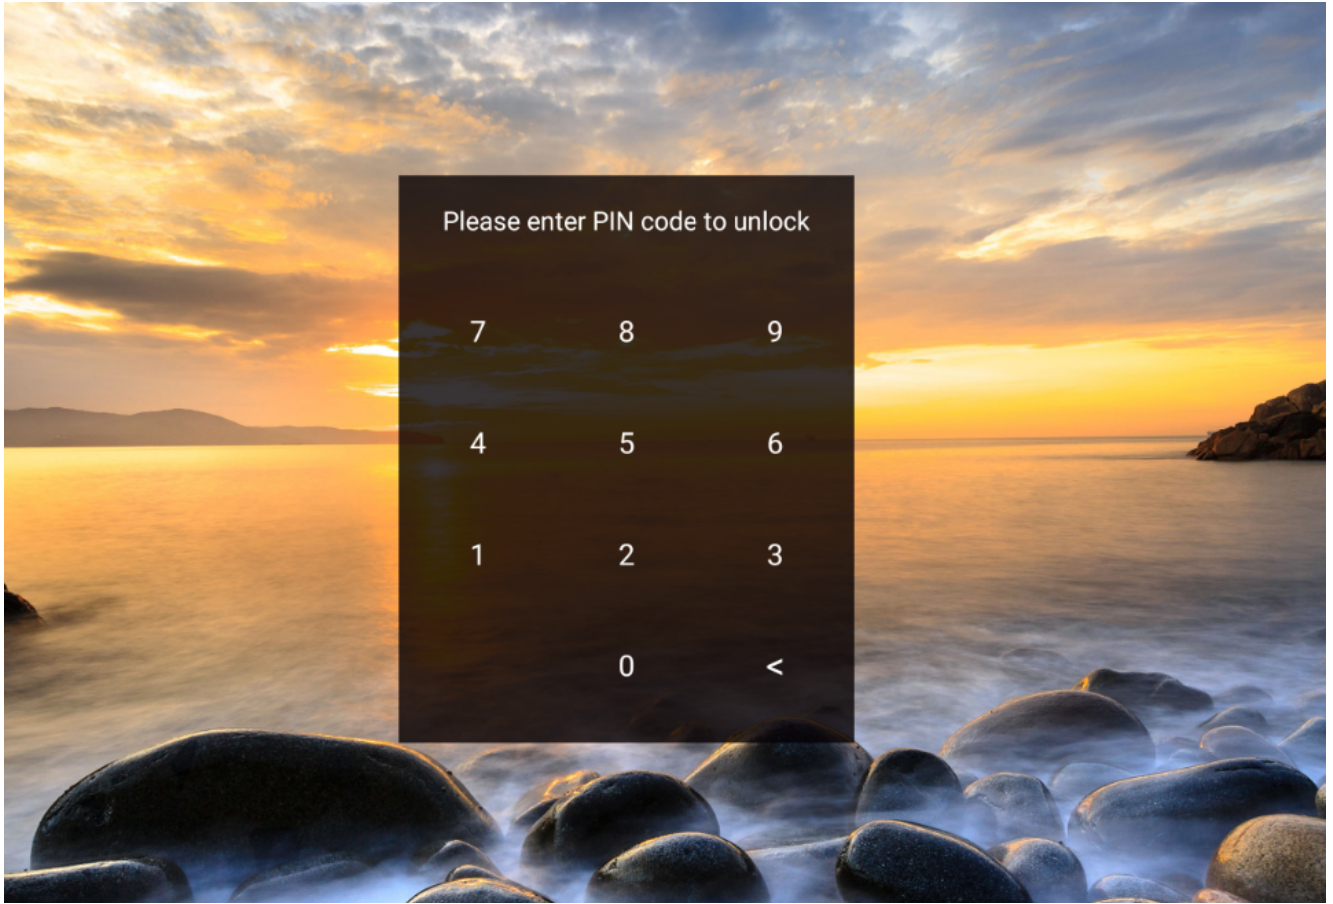

Please enter PIN code to unlock

7

8

9

4

5

6

1

2

3

0

<