


6. License management

Remote Manager Cloud is a paid cloud service, it needs license for enable the service to each devices. In “License management”, you can find the status for all devices. The status includes “Available”, “In-use”, “Expiring” as below image.

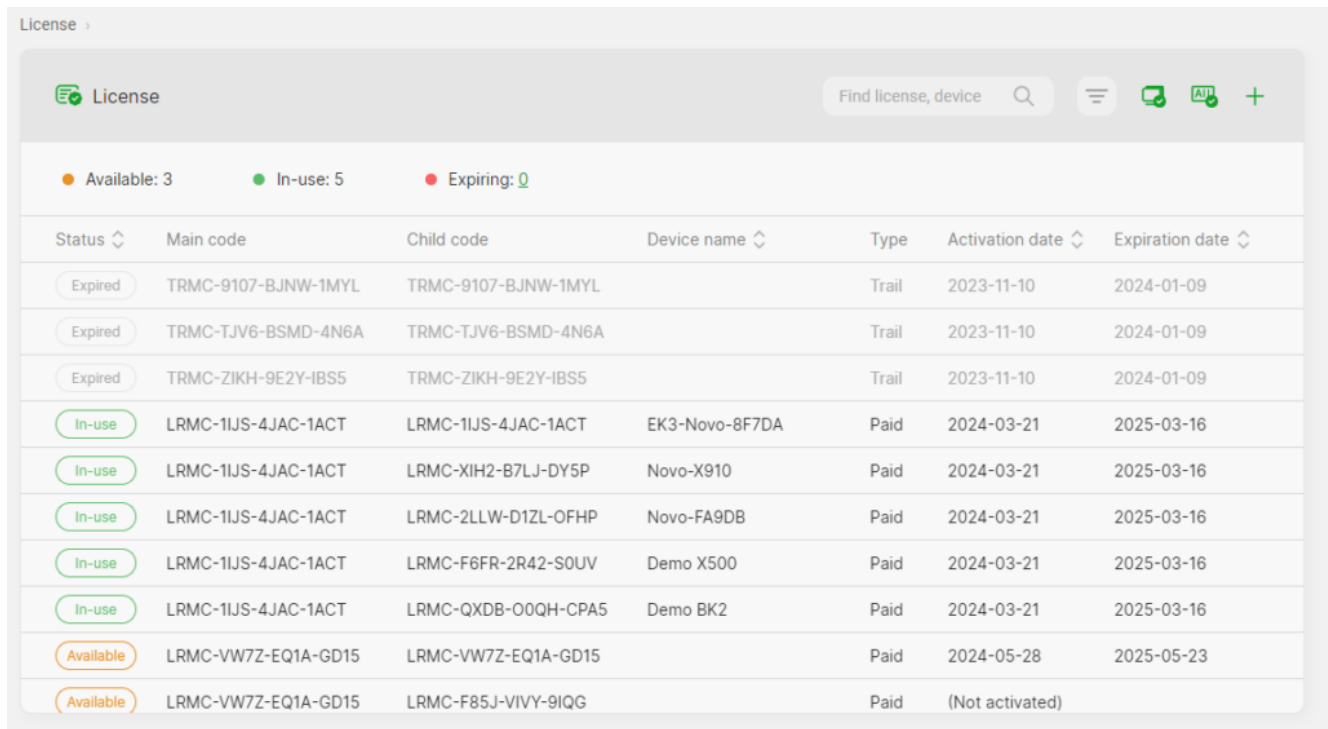

Status	Main code	Child code	Device name	Type	Activation date	Expiration date
Expired	TRMC-9107-BJNW-1MYL	TRMC-9107-BJNW-1MYL		Trail	2023-11-10	2024-01-09
Expired	TRMC-TJV6-BSMD-4N6A	TRMC-TJV6-BSMD-4N6A		Trail	2023-11-10	2024-01-09
Expired	TRMC-ZIKH-9E2Y-IBS5	TRMC-ZIKH-9E2Y-IBS5		Trail	2023-11-10	2024-01-09
In-use	LRMC-1IJS-4JAC-1ACT	LRMC-1IJS-4JAC-1ACT	EK3-Novo-8F7DA	Paid	2024-03-21	2025-03-16
In-use	LRMC-1IJS-4JAC-1ACT	LRMC-XIH2-B7LJ-DY5P	Novo-X910	Paid	2024-03-21	2025-03-16
In-use	LRMC-1IJS-4JAC-1ACT	LRMC-2LLW-D1ZL-OFHP	Novo-FA9DB	Paid	2024-03-21	2025-03-16
In-use	LRMC-1IJS-4JAC-1ACT	LRMC-F6FR-2R42-S0UV	Demo X500	Paid	2024-03-21	2025-03-16
In-use	LRMC-1IJS-4JAC-1ACT	LRMC-QXDB-00QH-CPA5	Demo BK2	Paid	2024-03-21	2025-03-16
Available	LRMC-VW7Z-EQ1A-GD15	LRMC-VW7Z-EQ1A-GD15		Paid	2024-05-28	2025-05-23
Available	LRMC-VW7Z-EQ1A-GD15	LRMC-F85J-VIVY-9IQG		Paid	(Not activated)	

Here is the introduction of license management.

- Add license: click “+” icon to add the license key.
- Assign license to all device: click “ALL” icon to assign all license you have at the same time.
- Assign license to group: if you already created device group, also can assign the license key for the device group.