



3.11 Clear History

Software Setup

Step 1. In the NT Launcher home screen, tap the button at the bottom-right corner.

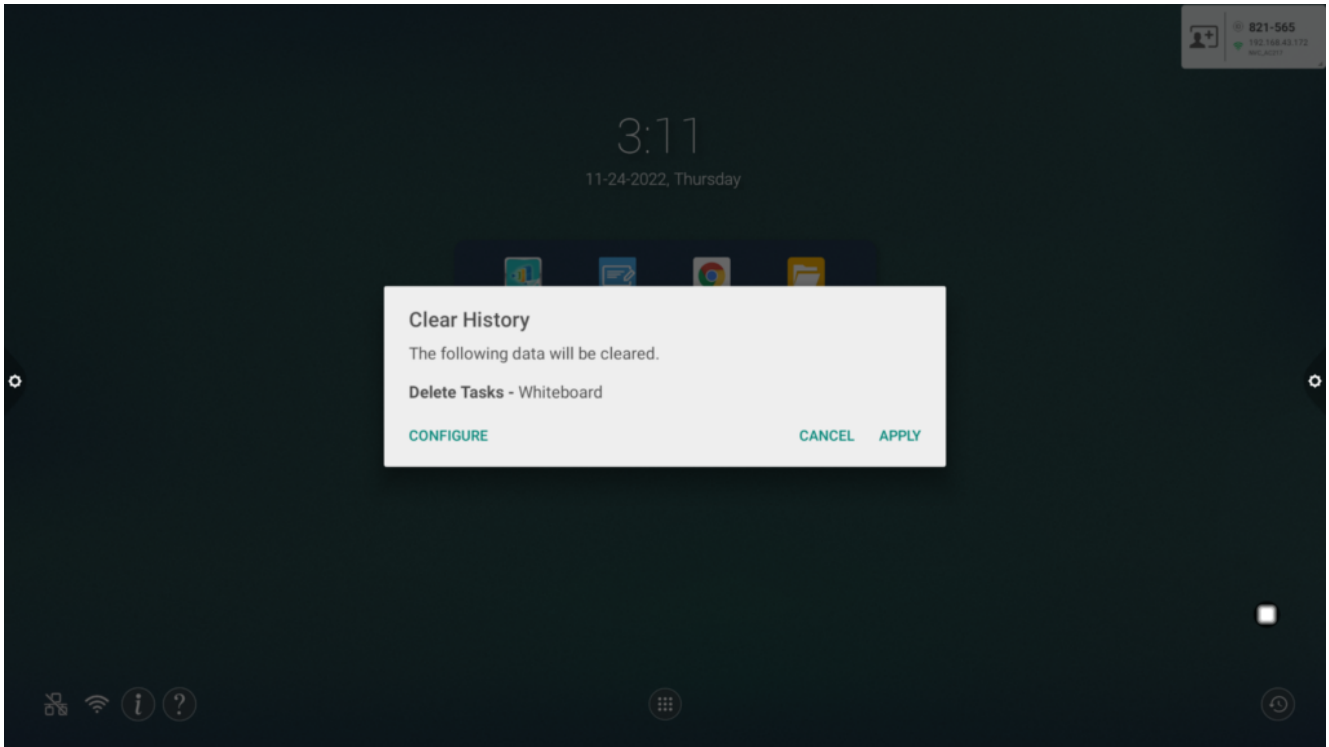

Step 2. Tap **CONFIGURE** to enter the **Configuration** menu.

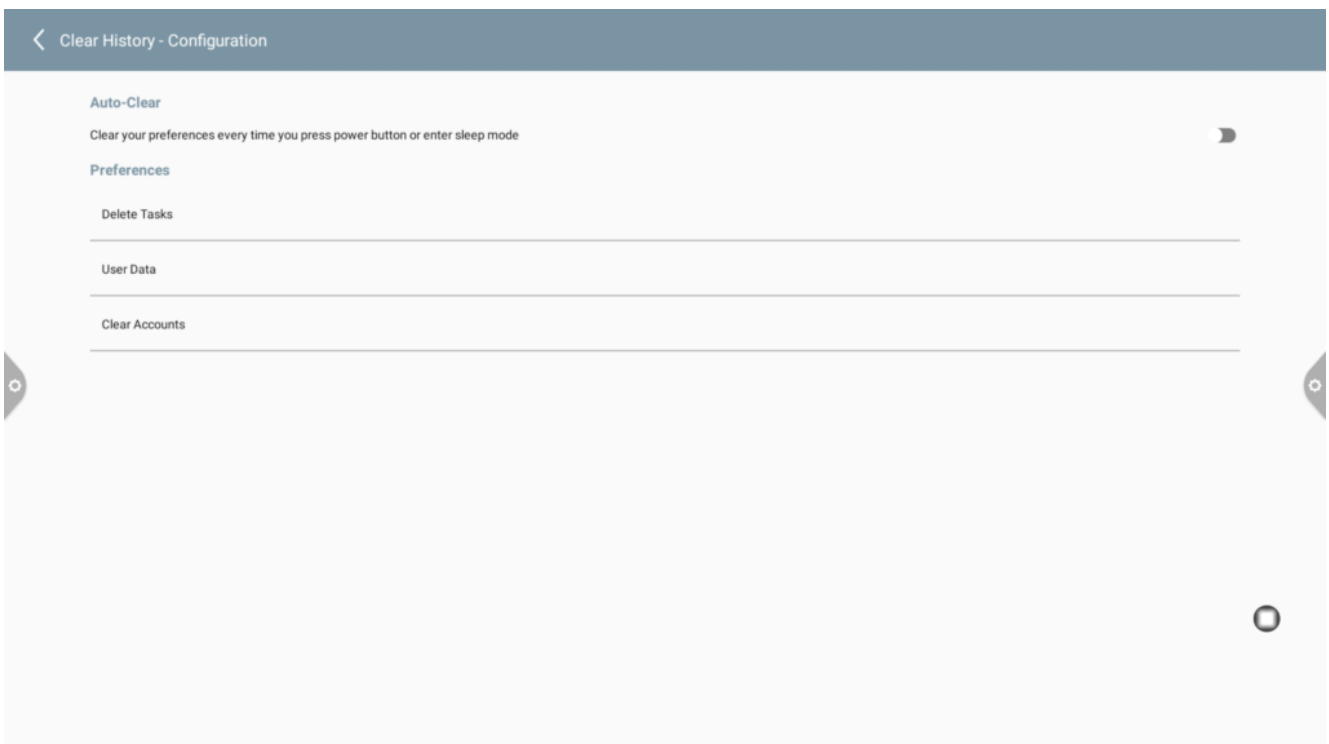


Step 3. The following options will be shown:

- **Auto-Clear:**

When enabled, the display will clear its history anytime the power button is pressed or the display enters sleep mode.


- **Delete Tasks:**

Allows you to remove any of the third-party apps shown from the recently used apps list.

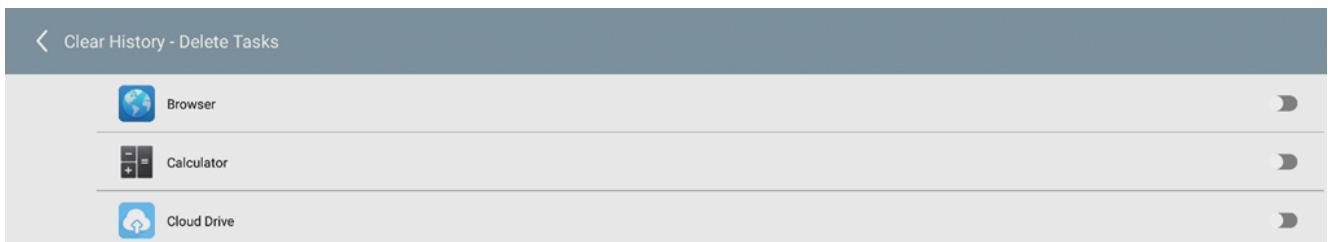


- **Folders:**

Tap + to add a folder to the list of folders to clear.

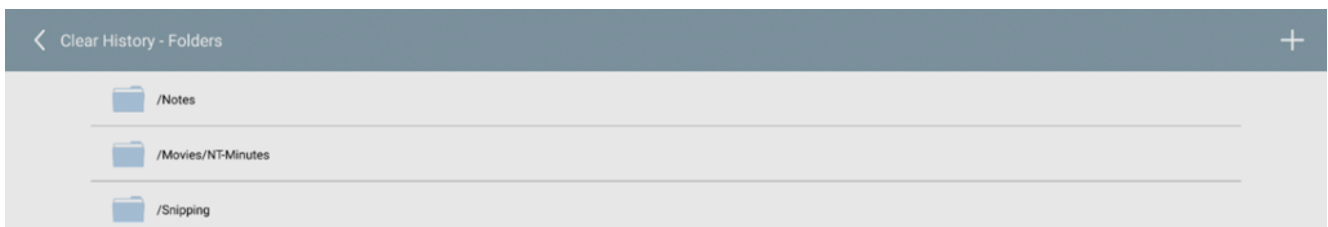


After selecting a folder, you can choose whether to delete the folder entirely or just clear the folder of its contents.

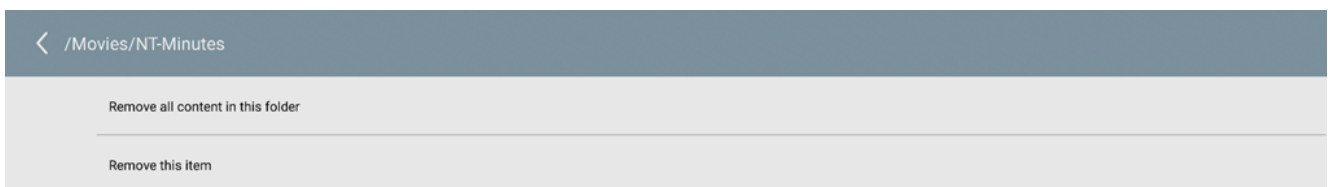

- **User Data:**

Allows you to clear a third-party app of its user information.

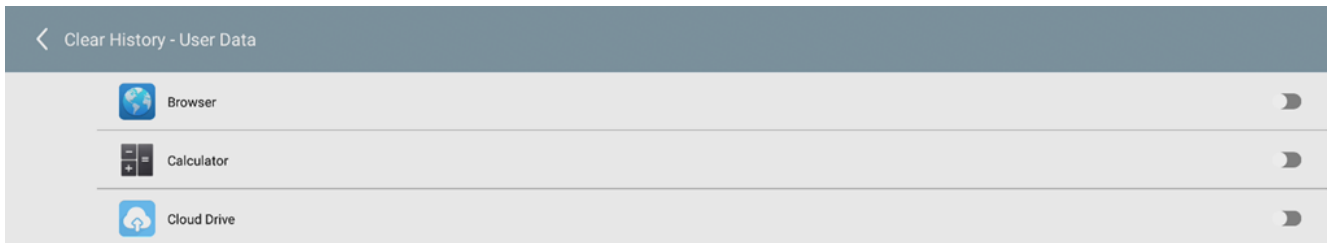

▪ **Clear Accounts:**

Allows you to clear any accounts from the system.



Step 4. Tap < to return to the **Configuration** menu.

Step 5. Repeat step 1 and tap **Apply** to begin clearing the history. If **Auto-Clear** has been enabled, press the power button on the display.

