


3.12 Whiteboard

The NovoTouch BK653i/BK753i/BK863i Note app allows you to use the touchscreen as a sketchpad to freehand draw on the display using touch gestures.

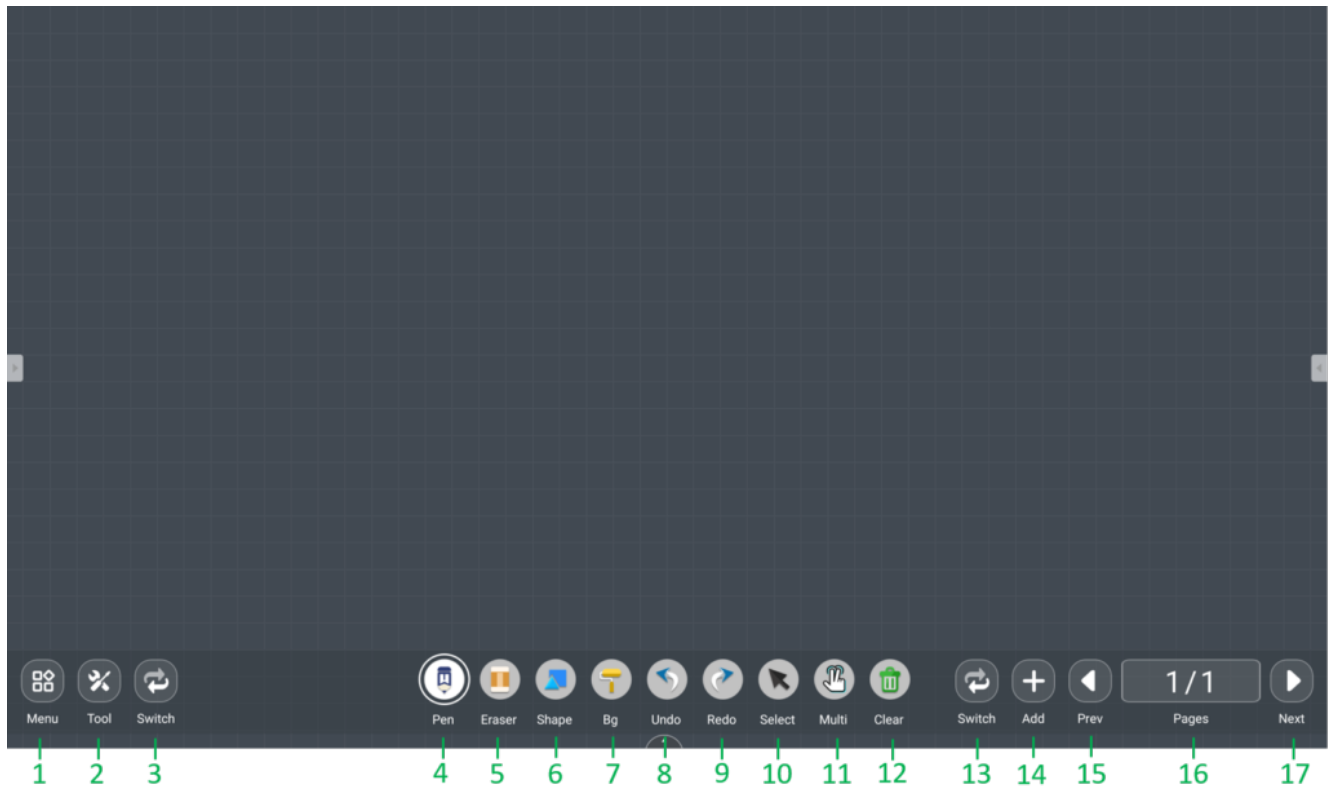

No.	Item	Description
1	Menu	Menu button is providing save/open/start new drawings, import/export images, and perform other file related actions.
2	Min	Allow you to minnum the app
3	Exit	Exit app
4	Pen	Allow you to draw as well as configure the size and color of the drawing tool you want to use.

5	Eraser	Allow you to erase items drawn on the touchscreen.
6	Select	Allow you to select the single/multiple objects.
7	Multi	Allow you to switch the touch mode in single/multi finger.
8	Clear	Allow you to erase all items drawn on the touchscreen at once.
9	Undo	Cancel the previous action.
10	Redo	Restore the previous action.
11	Tools	Advanced tools
12	List	The page list of whiteboard
13	Add	Add a new page to the drawing.
14	Switch	Switch the menu area to right side.