


# 3.12 Whiteboard

The NovoTouch BK650i/BK750i/BK860i Note app allows you to use the touchscreen as a sketchpad to freehand draw on the display using touch gestures.

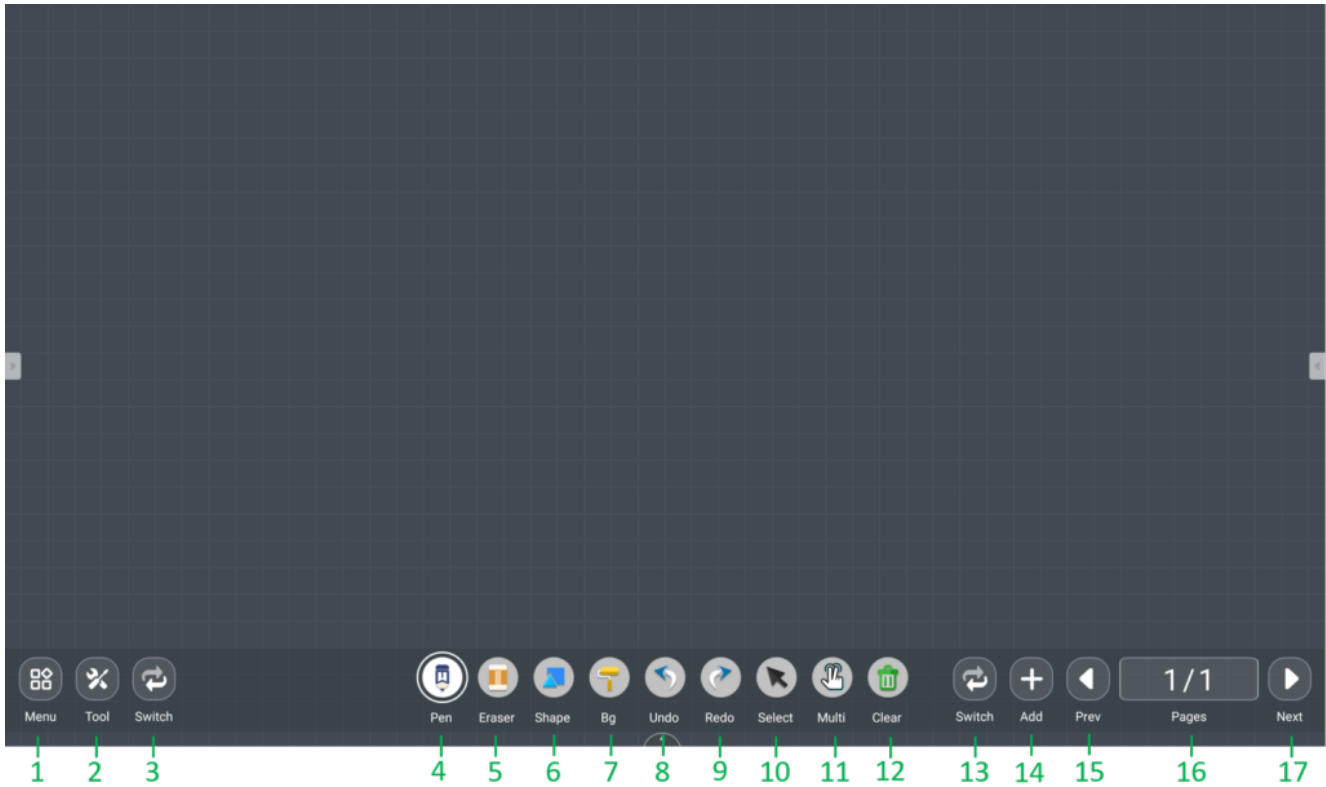

No.	Item	Description
1	Menu	Menu button is providing save/open/start new drawings, import/export images, and perform other file related actions.
2	Tools	Allow you to add ruler, compass and protractor on the drawing.
3	Switch	Swaps the left#1~#4 and right#14~#18 tools
4	Pen	Allow you to draw as well as configure the size and color of the drawing tool you want to use.
5	Eraser	Allow you to erase items drawn on the touchscreen.
6	Shape	Allow you to add lines and shapes on the drawing.
7	Bg	Allow you to change background color, background image and background shape.

8	Undo	Cancel the previous action.
9	Redo	Restore the previous action.
10	Cursor	Allow you to select and move items drawn on the touchscreen.
11	Multi	Enable/Disable multi-touch functionality
12	Clear	Allow you to erase all items drawn on the touchscreen at once.
13	Switch	Swaps the left#1~#4 and right#14~#18 tools
14	Add	Add a new page to the drawing.
15	Prev.	Jump to the previous page.
16	Pages	Displaying/Selecting pages.
17	Next	Jump to the next page.