

6.1 How to use remote control to disable front buttons or touch function

Compatible with

NovoTouch BK series: BK650i, BK750, BK860i



No.	Button	Description
1	Power	Turns the display on or off.
2	Windows Menu*	Performs the same action as the Windows key on a PC keyboard.
3	Spacebar*	Performs the same action as the spacebar on a PC keyboard.
4	Numeric Keypad	Numeric input buttons.
5	Display Information	Displays the current channel/input information.
6	Input Source	Opens the input source menu.
7	Lock/Unlock Display Buttons and Touchscreen	Disables/Enables both the buttons located on the front of the display and the display's touchscreen.
8	Blank Screen	Makes the screen display a monochromatic screen.
9	Lock/Unlock Display Buttons	Disables/Enables the buttons located on the front of the display.
10	Navigation Buttons	Navigates between various applications and menus shown on screen.
11	Quick Draw	Launches the displays drawing tools. See the Tools section for more information.
12	Page Up/Down*	Performs the same action as the Page Up/Down buttons on a PC keyboard.
13	Function Buttons	Functional buttons.
14	F1 - F12*	Performs the same action as the F1 - F12 keys on a PC keyboard.
15	Mute	Disables the display's audio.
16	Alt+F4 (Close Window)*	Performs the same action as the Alt+F4 key combination on a PC keyboard.
17	Alt+Tab (Switch Window)*	Performs the same action as the Alt+Tab key combination on a PC keyboard.
18	Function Button	Functional button.
19	Home Screen	Returns the display to the home screen.
20	Settings Menu	Opens the OSD settings menu.
21	Freeze Screen	Freezes the screen.
22	Backspace	Deletes the entered text.
23	Lock/Unlock Touchscreen	Disables/Enables the display's touchscreen and prevents touch gestures from working.
24	Back	Returns to the previous screen.
25	Volume +/-	Adjusts the display's audio level.

*Only functional when an OPS unit running Windows is installed into the display.

