

6.1 Disable/Enable touch feature

For some use cases, you may want to temporarily **disable or enable** the touch feature. The following instructions show how to **disable or enable** it.

Disable Touch Feature

To **disable touch**, use a key combination on the remote control. Press these buttons sequentially: **Input Source**, **Input Source**, then **Vol down**.



Enable Touch Feature

To enable touch, use a key combination on the remote control. Press these buttons sequentially: Input Source, Input Source, then Vol up.

