

## 2.4 Firmware Upgrade via a USB disk

**Important:** *This article is applicable to NovoDisplay series, model name as DK433, DK553, DK653, DK753, DK863.*

Follow these steps to re-flash your NovoDisplay with a clean installation.

### Step-by-step instructions:

- The upgrade package is stored in a folder called “**AMLT972**”. When you receive the firmware upgrade package, typically you need to unzip it first and then copy the two files “aml\_sdc\_burn.ini” and “aml\_upgrade\_package.img” to the root of a USB disk. You should see the following files on the USB disk.



Name	Date modified	Type	Size
aml_sdc_burn	2022/10/18 上午 04:...	文档设置	1 KB
aml_upgrade_package	2022/11/22 上午 07:...	光碟映像	1,647,778 KB

- Power down NovoDisplay.
- Insert the USB disk into the USB2.0 port at the back/side panel of NovoDisplay.
- Press POWER button until the upgrade process is started. Please do NOT remove the USB disk during this process.
- A progress bar is shown to display the completion percentage. Once it gets to 100%, power down NovoDisplay and remove the USB disk.
- Power on and press POWER button to start NovoDisplay

