

4.1 How To Connect to Crestron System

NovoDisplay can be controlled by a **Crestron** System. Follow the instructions below to connect to the **Crestron** System.


Step 1. Click Presentation in the bottom right.

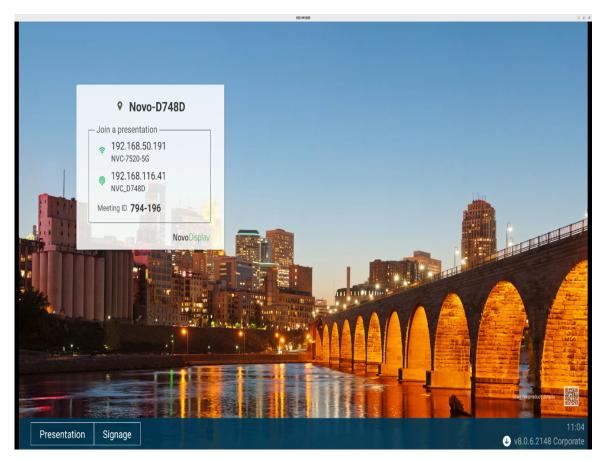


Step 2. From the menu, select **Settings**.

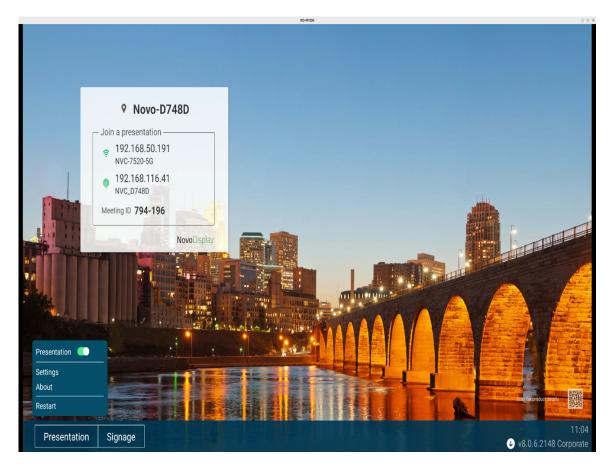


Step 3. From the Setting menu, select Device Settings.

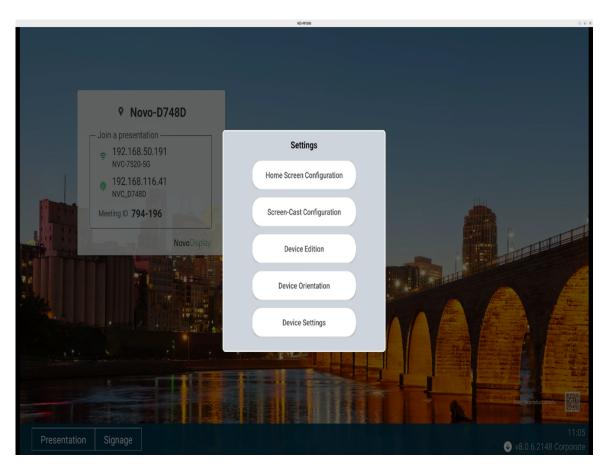


Step 4. Click General to enter the General Settings.

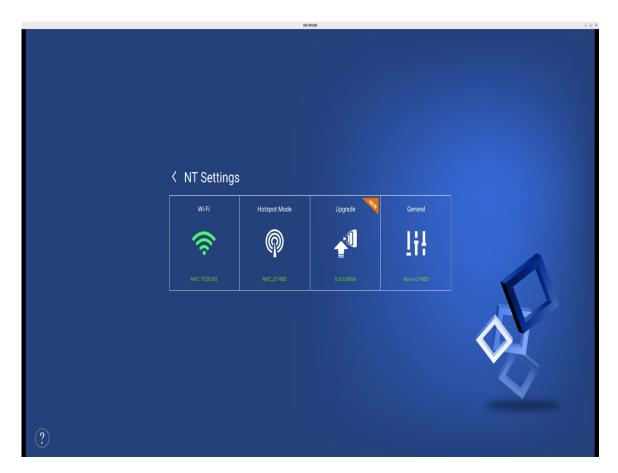


Step 5. On the General Settings page, click **Configure** to enter the **Crestron** configuration.

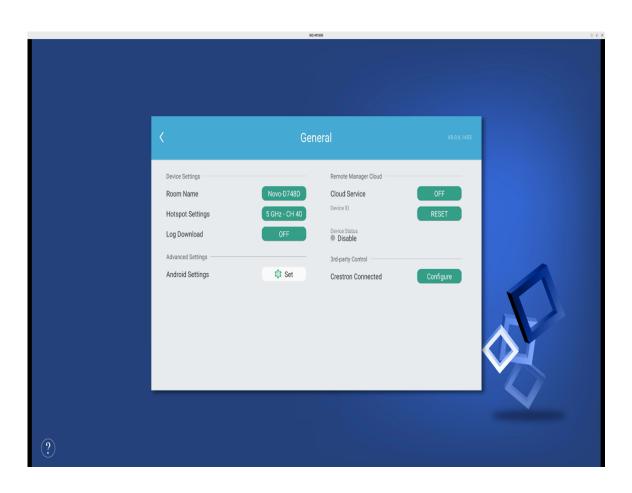


Step 6. There are three ways to connect to a **Crestron** system: **Crestron Cloud XiO**, a **local Crestron system**, or **Auto Discover**. On the Settings page, the first tab is **XiO**. Fill in the required information, then click **Apply** to connect to **Crestron XiO**.

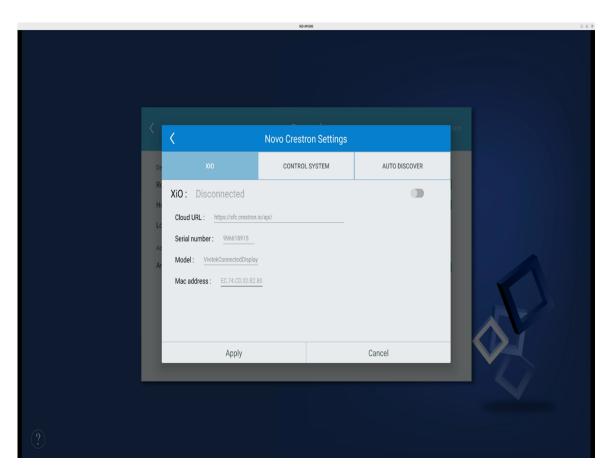

Step 7. The second tab is **Control System**. Fill in the required information, then click **Apply** to connect to a **local Crestron system**.

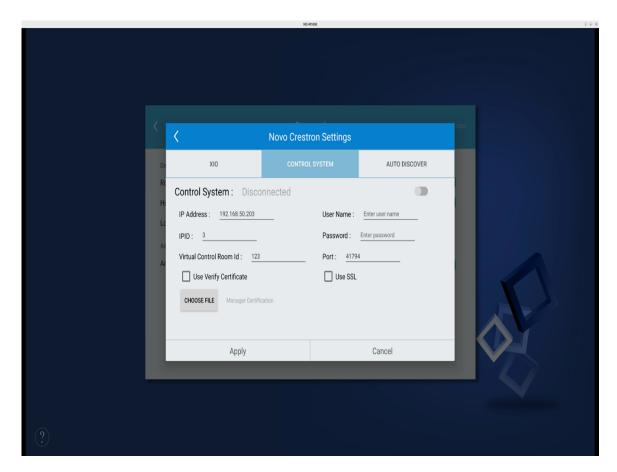

Step 8. The third tab is **Auto Discover**. This allows a **NovoDisplay** to look for a **Crestron system on the local network**.

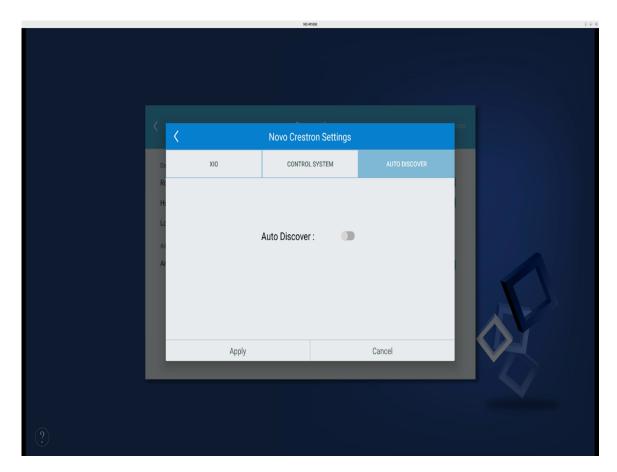

Step 9. After the connection option is selected and the required information is filled in, the device will be connected to and controlled by the Crestron system.