


# Firmware Update with a USB Drive (for NovoTouch EK-1)

## Important:

1. *This document is applicable to NovoTouch EK series, including **EK650i**, **EK750i**, and **EK860i**.*
2. *Each EK model has its own upgrade package. Please make sure you download the correct package for your model. Using a wrong package could make your NovoTouch unable to boot up.*

## Step-by-step instructions:

1. The upgrade package is stored in a folder called **“upgrade\_551”**. When you receive the firmware upgrade package, typically you need to unzip it first and then copy folder **“upgrade\_551”** onto a USB disk. You should see the following file/folder structure on the USB disk.

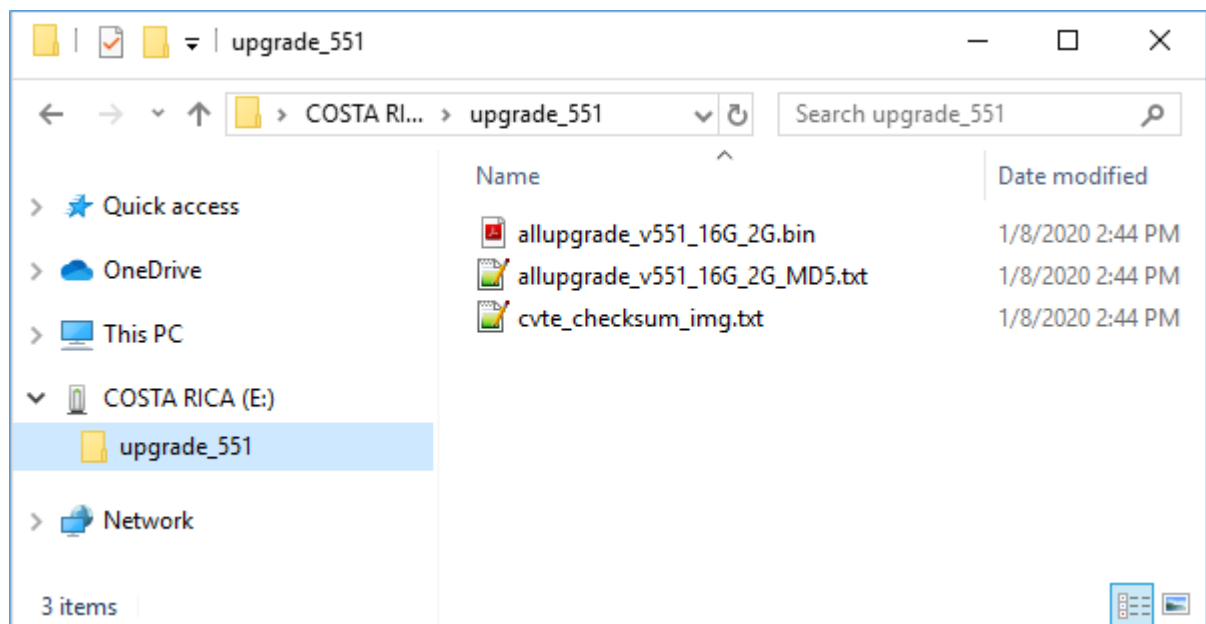

2. Power down NovoTouch panel.
3. Insert the USB disk into the USB port at the front panel of NovoTouch panel.
4. Press-and-hold button POWER until the LED flashes red and blue quickly, indicating the upgrade process is

started. Please do NOT remove the USB disk during this process.

5. A progress bar is shown to display the completion percentage. Once it gets to 100%, the NovoTouch will restart automatically. During this first-time boot-up, it will take a bit longer to perform some additional post-processing.
6. Once it fully boots into Android home screen, the firmware upgrade is completed. Now you can unplug the USB disk.