

How to use RFID tag Login

Model name: NovoTouch EK653i, EK753i, EK863i


Firmware version: V4.3.0

The reader must meet the following conditions:


- Windows Platform
- USB Interface: This means that it is connected via USB to the computer.
- It uses the same frequency of the cards, key fobs, tags or bracelets that you want to use: There are 2 common frequencies in RFID Readers, **13.56 Mhz**, and **125 kHz**. The reader and the cards must use the same frequency.

Setup RFID Login

Step1. Open **Remote Manger** > select the NovoTouch, go to **Setting > Misc. > Set RFID Login**

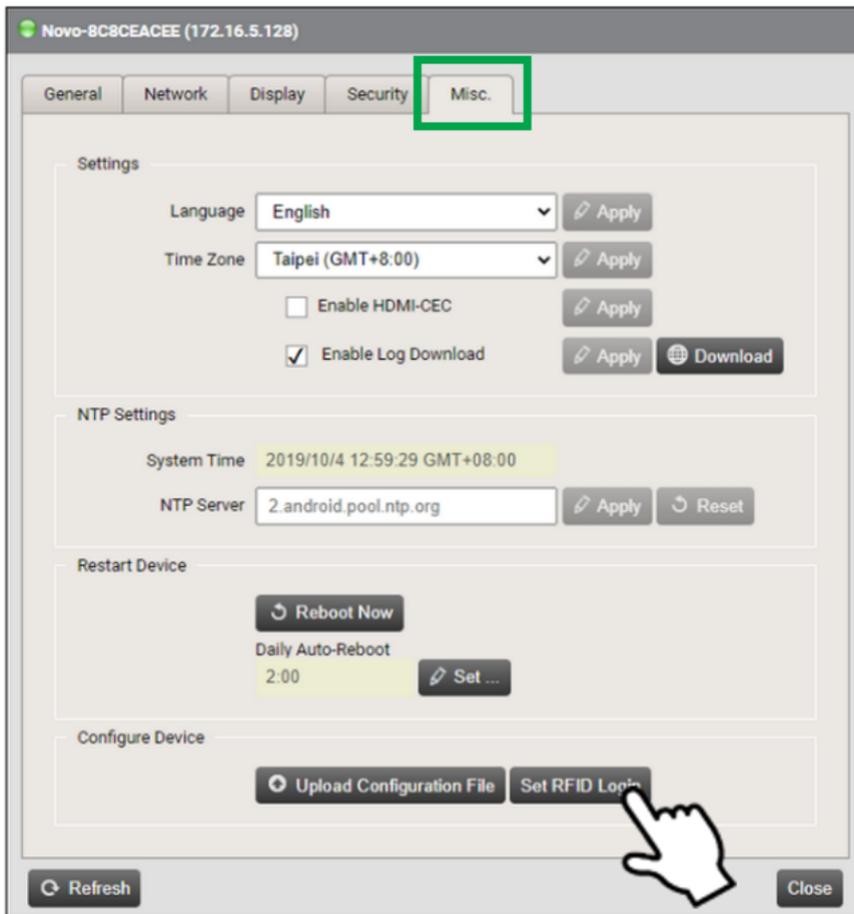

Step2. Once a loading screen appears insert the USB of the RFID reader into laptop. The software will automatically detect the reader. If not click on **New RFID reader**.


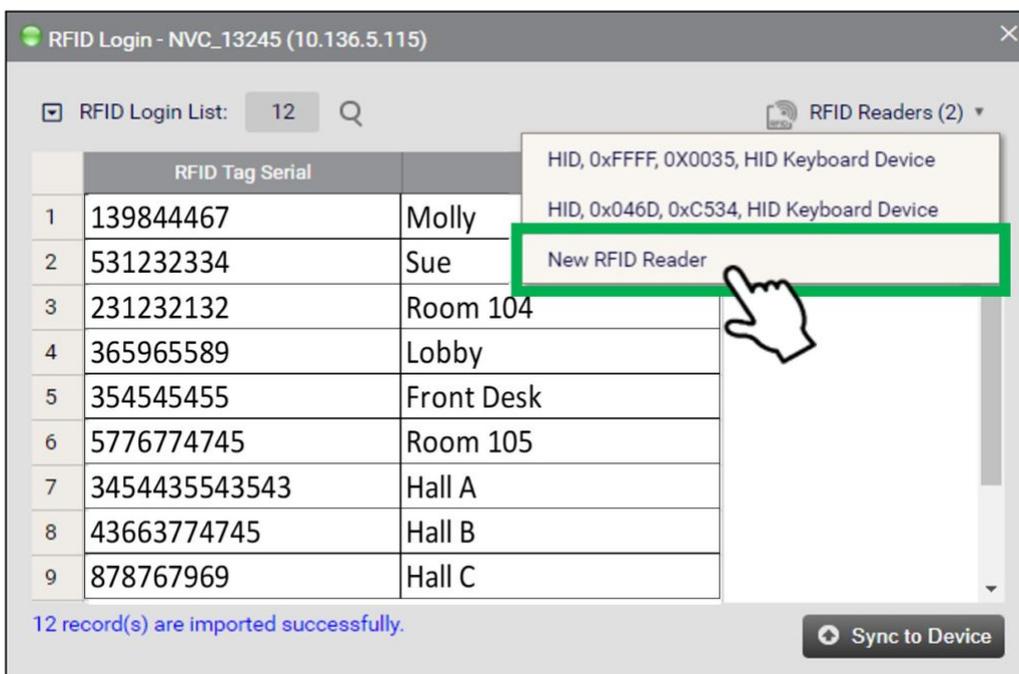


Create your RFID Tag list in one of the four ways!

1. Import Tag list from PC

Click  > **Import from ...** > select the **.csv** file from your local drive and click Open

Note: All the tag IDs will be inputted. Duplicate numbers will be removed.

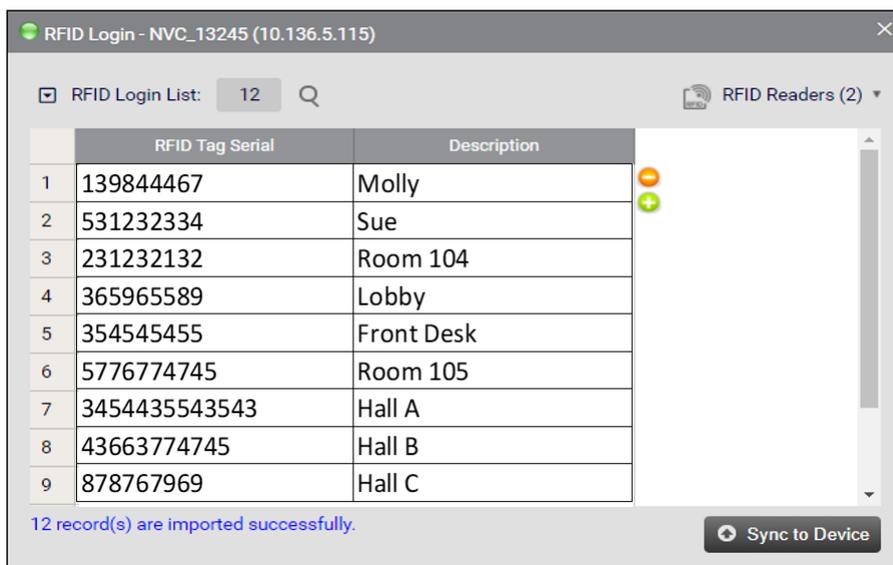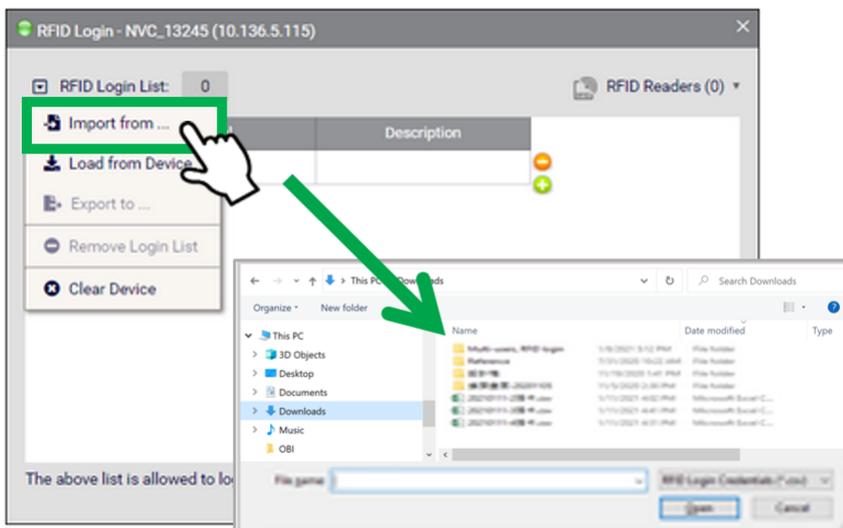

2. Load from device


Users can load the Tag list + Reader List from an external device.

Step1. Connect the external device with the tag list to your PC

Step2. Go to **RFID Login List: > Load from device**

Step3. A pop-up message will ask you to continue, select **Yes**

Note: If there is no data found, "Load from Device" will be greyed out. In this case please check your file. If the problem persists load the file on your PC and follow Procedure 1.

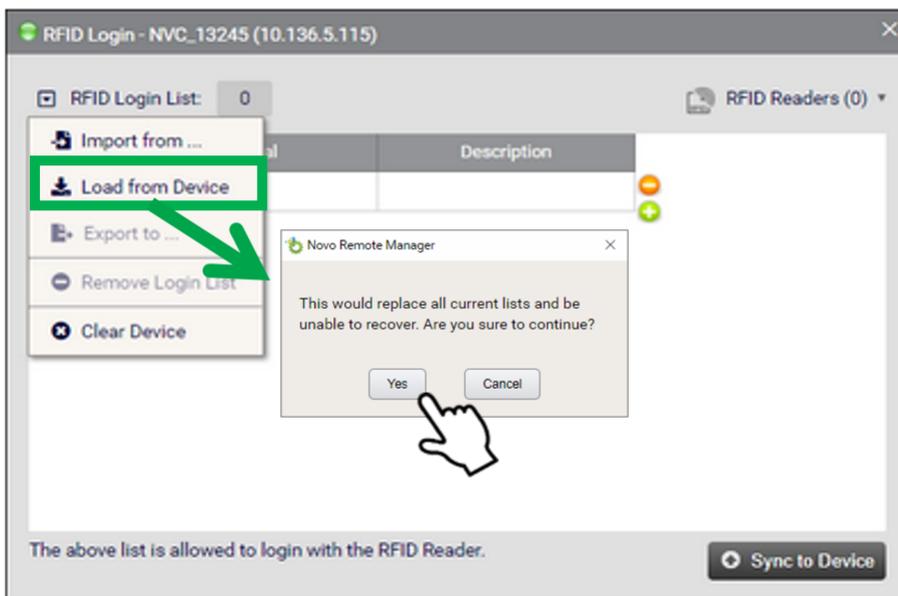

3. Manually enter Tag ID

- Use the keyboard to directly input the Tag ID and description

- Click  to add a new Tag ID

	RFID Tag Serial	Description	
1	0000168154	Molly	+
2			+

4. Create list via RFID reader

Step1. Scan the card or RFID tag, the software automatically detects the Tag ID

Step2. In the description section add details of the tag to identify it

Step3. Click  to add the next card number and follow the same procedures

	RFID Tag Serial	Description	
1	0000168154	Molly	+
2			+

	RFID Tag Serial	Description	
1	0000168154		+
2	0000166551		+
3			

Test the Connection at NovoTouch

Once the reader has been added it is recommended to test the connection to make sure it is working.

Step1. Connect the RFID reader to NovoTouch via USB port

Step2. Scan a card/tag by passing it over the reader

Step3. If the RFID reader reacts to the scan the screen will

be unlocked

Note: The RFID reader can be used concurrently with PIN

