NovoTouch EK4 series User's Manual

EK4 series: EK656i / EK756i / EK866i

1. Get to Know Your Touch Panels

- 1. What is NovoTouch EK4 series
- Product Features
- 3. Companion Software

2. Set Up Your NovoTouch

- 1. <u>Installing the Wall Mount</u>
- 2. Get Started
- 3. Connect your NovoTouch to your network
- 4. <u>Setting up a Wi-Fi Hotspot</u>
- 5. Turn WiFi off and on
- 6. Change device name
- 7. Switch input source
- 8. <u>Use Remote Manager for installation</u>
- 9. Firmware Update with USB Drive

3. NovoTouch Basics

- 1. Home Screen
 - 1. Change the wallpaper
- 2. Launch Pad
- 3. Side Bar Tools
- 4. NovoConnect
 - 1. <u>Using Native Mirroring</u>
- 5. NT LiveReceiver
- 6. Browser
- 7. File Manager
- 8. NT AppManager
- 9. Whiteboard
- 10. Screen Lock
- 11. On-Screen Annotation & Touch back
- 12. More Apps

4. Advanced Features

- 1. NT Settings
- 2. Advanced Feature
 - 1. Boot-up Time
 - 2. Shutdown Time
 - 3. Auto Sleep
 - 4. Boot Channel
 - 5. Wake Up By Input Source
- 3. SysControl (Network-based Control)
- 4. NovoTouch EK-4 RS-232 Control

5. More of NovoConnect Software

- 1. Screen Extension
- 2. Audio On/Off and Mirroring Mode
- 3. Video and YouTube
- 4. AirNote
- 5. NT LiveNote On-Screen Annotation & Screen-Share Control
- 6. Sharing Files and Webpages
- 7. Voting/Polling
- 8. <u>Touchback From Projected Screen</u>

6. FAQs and Troubleshooting

- 1. How to use remote control to disable touch feature
- 2. How to capture log

7. Remote Manager

- 1. Introduction
- 2. Install Software
- 3. Add/Remove Group Device
- 4. Add Devices via Auto Discovery
- 5. Configure Device Setting
- 6. Remote Power On/Off (RDM)
- 7. <u>Update Firmware</u>
- 8. <u>Configure Moderator Credentials</u>
- 9. <u>Server mode Remove Manager DB Server</u>
- 10. <u>Use Remote Manager for large deployment</u>

8. Accessories

1. Mobile Stand VKST41