5.2 Audio On/Off and Mirroring Modes

After joining a meeting, user can enable/ disable audio output on **Projection Mode** to choose **Video Playback** (enable output audio) or **Presentation** (muted, default setting).

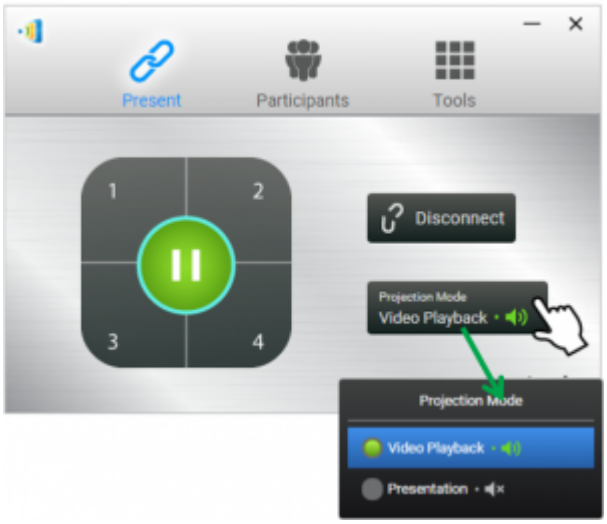

Tablet, iPad, Android smartphone or iPhone user: No enable audio option on screen sharing via NovoConnect App because Android or iOS cannot allow any third party App to mirroring audio. However, there is two ways for output audio:

1. Use AirPlay or Google Cast. See Presentation: Using AirPlay, Google Cast.
2. Use Video Streaming feature from NovoConnect App.

macOS – How to output audio

Install Soundflower on Mac computers

Soundflower is a kernel extension for MacOS, designed to create a virtual audio output device which NovoConnect Software for MacOS relies on to output audio properly.This article describes how to install Soundflower on Mac computers.

NovoConnect Software and LauncherPlus/LauncherOne Software

1. Download the installer: soundflower_2.0b2.zip.
2. Unzip and double-click Soundflower.pkg to start. Follow the on-screen instructions to complete the installation.

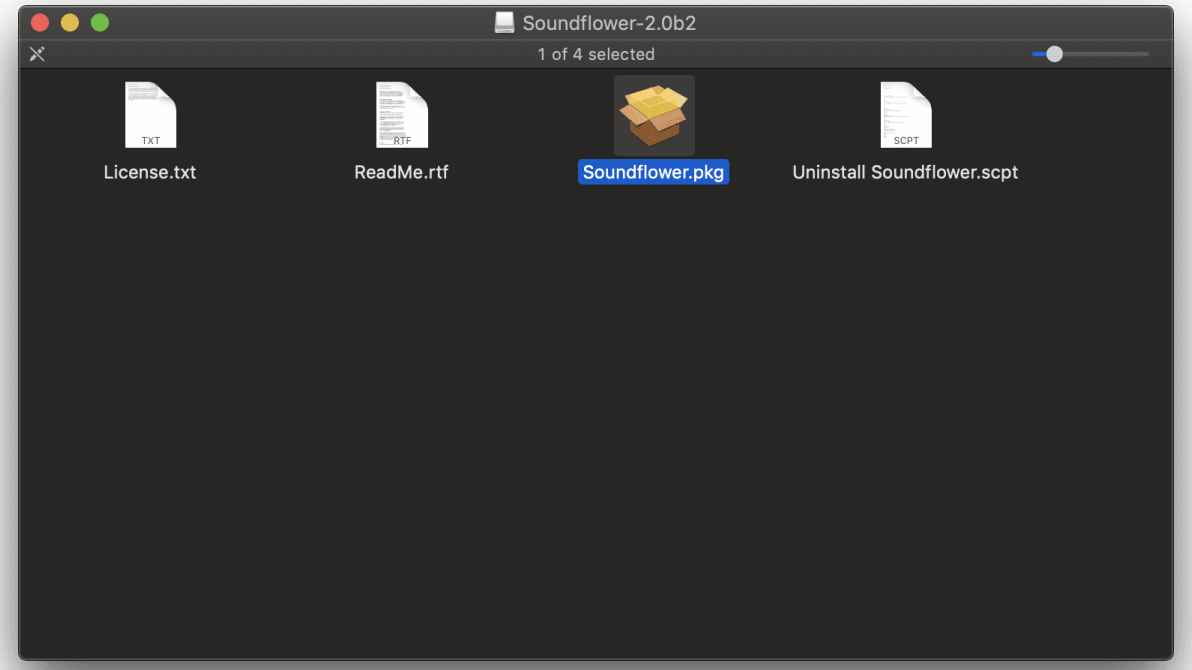

Additional Steps for MacOS 10.13 +

- Due to security and privacy changes introduced starting with MacOS 10.13, some additional steps are needed during and after the installation process.

Security and Unidentified Developer

- You may run into the following “unidentified developer” issue during Soundflower installation.

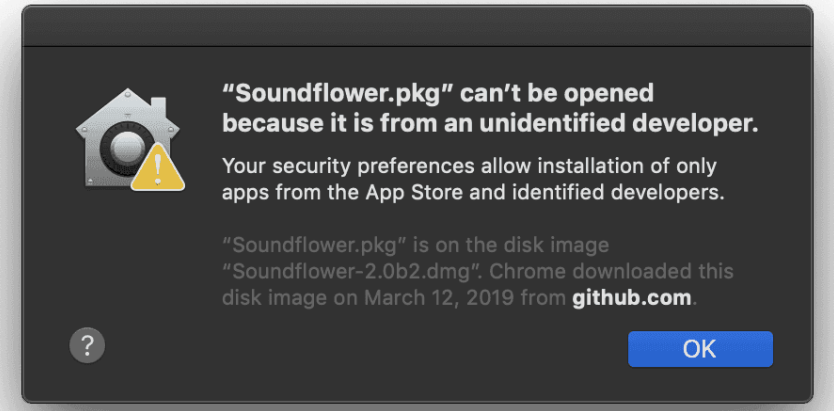

- In this case, follow these steps to enable a successful installation:

1. Open the "System Preferences" and go to "Security & Privacy". You should find "Soundflower.pkg" under tab "General". Click on "Open Anyway".

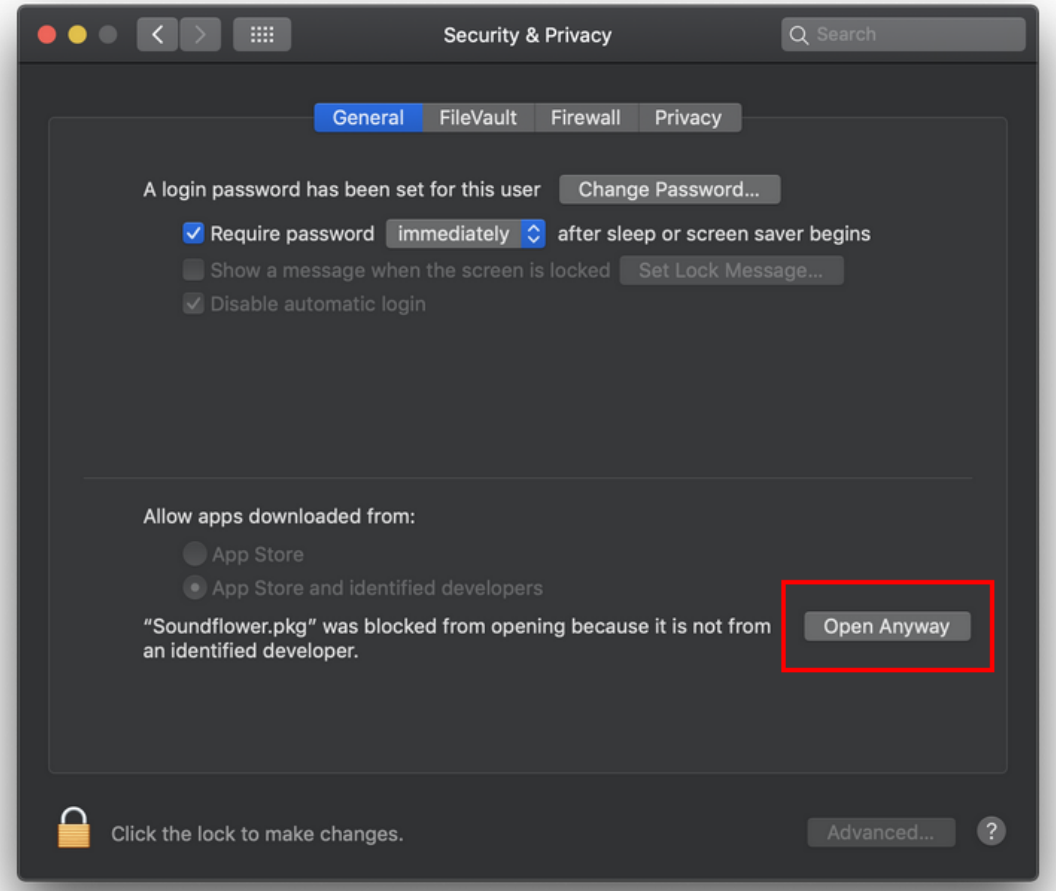

2. When the following dialog shows up, click on “Open” to continue.

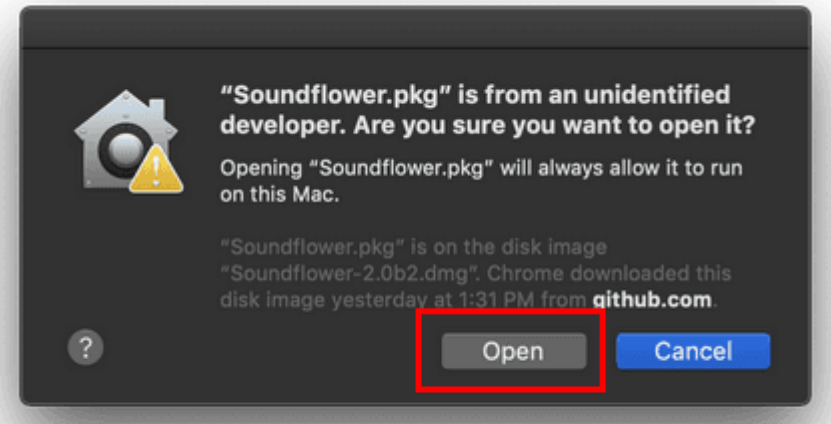

3. Then, you can re-start the Soundflower installer and it should complete successfully.

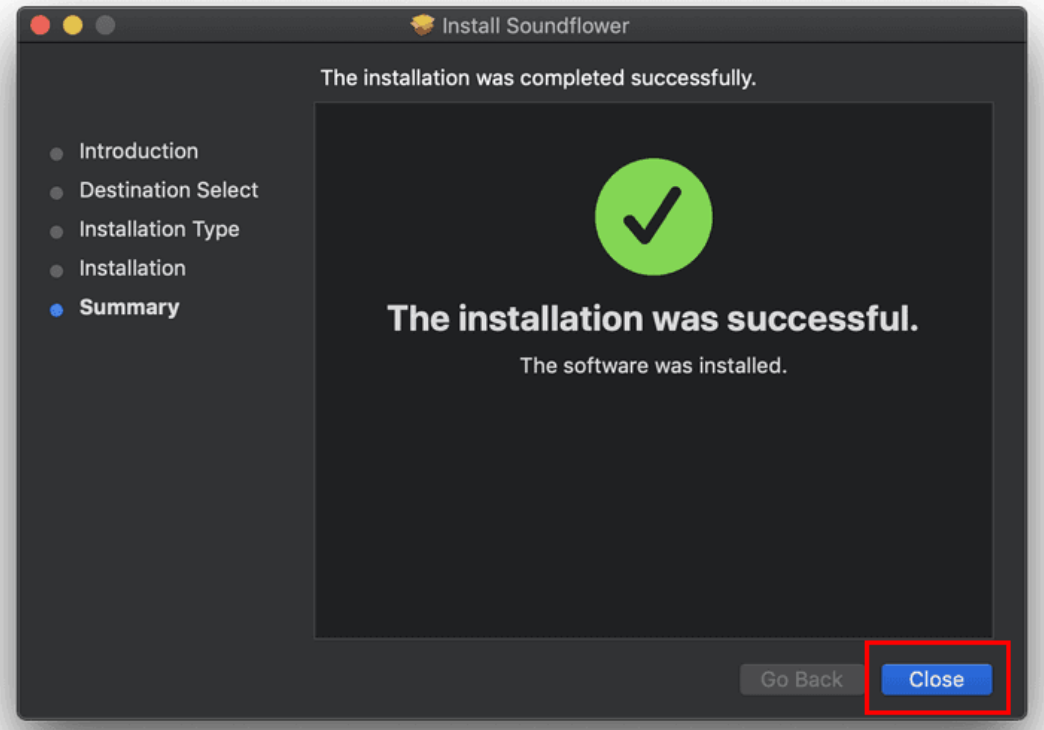

4. Lastly, even though not required, it is a good practice to restart your Mac after a successful installation.

Privacy and Sound

For MacOS 10.14 +, one additional configuration is needed regarding the audio output.

1. Open the “System Preferences” and go to “Security & Privacy”.

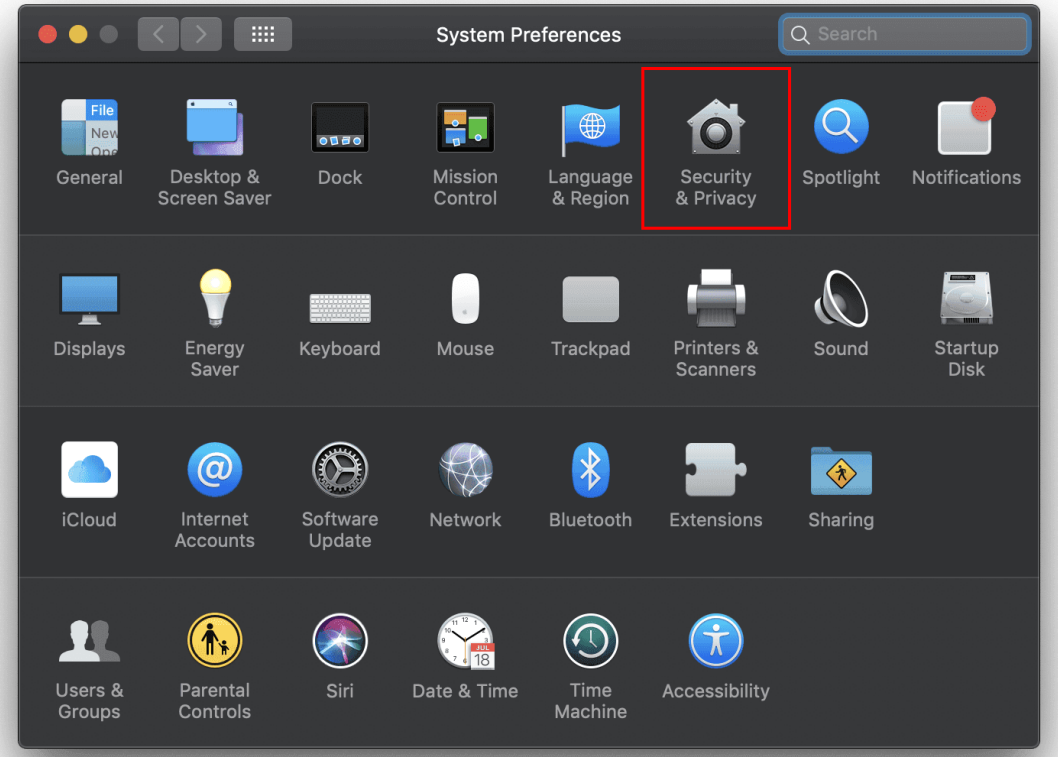

2. Click on “Privacy > Microphone” and then check “NovoConnect Software”

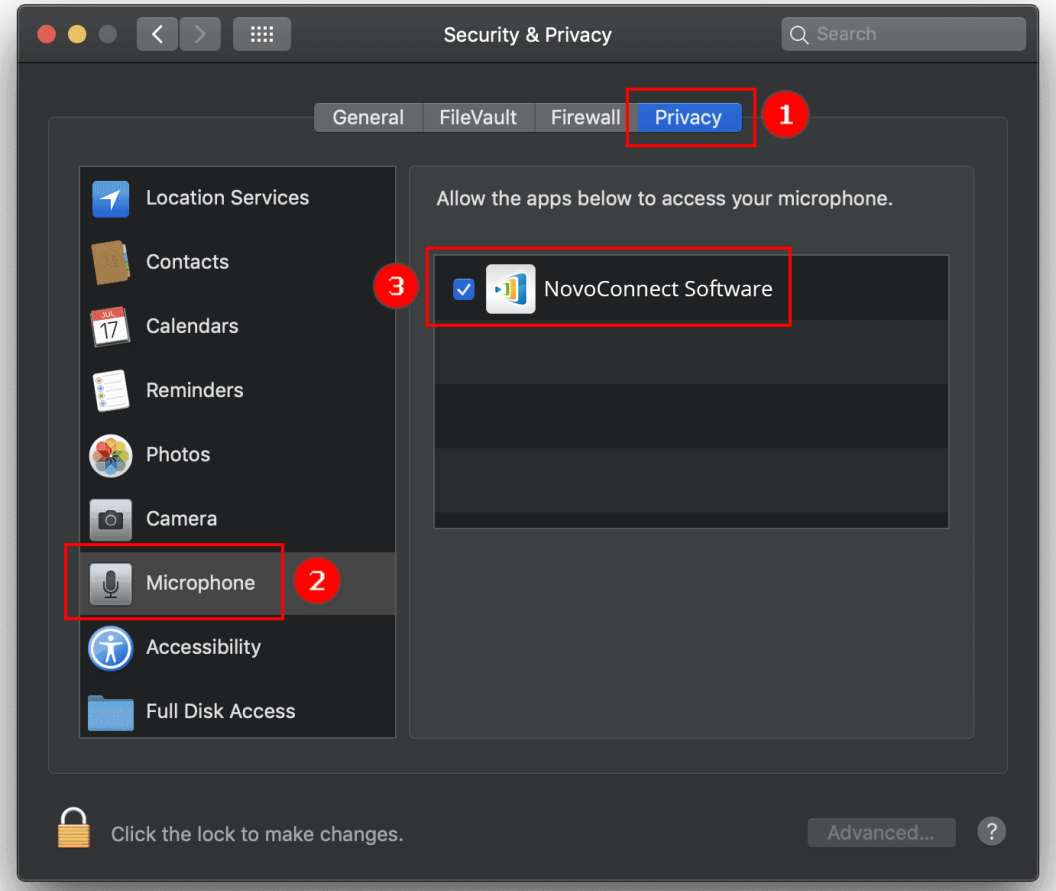

3. Now, your NovoConnect Software & LauncherPlus/LauncherOne software should be able to output audio.

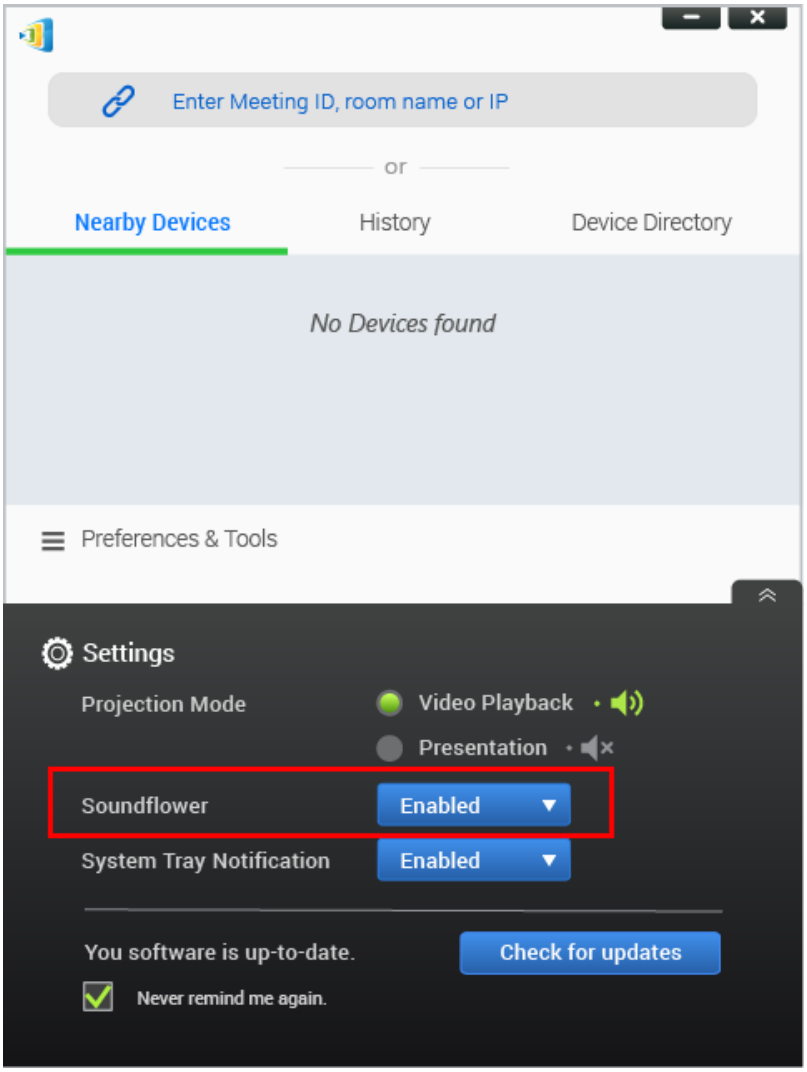
Enter Meeting ID, room name or IP
or
Nearby Devices
History
Device Directory
No Devices found
Preferences & Tools
Settings
Projection Mode
Video Playback
Presentation
Soundflower
Enabled
System Tray Notification
Enabled
You software is up-to-date.
Check for updates
Never remind me again.