



Assigning a Created Schedule to Devices.

Step1. Click the 'Device' icon listed on the left side.

Step2. Select the online device whose status shows a green light, and then click the settings icon on its right side (marked in red). If the device status is offline, the settings icon will not appear.

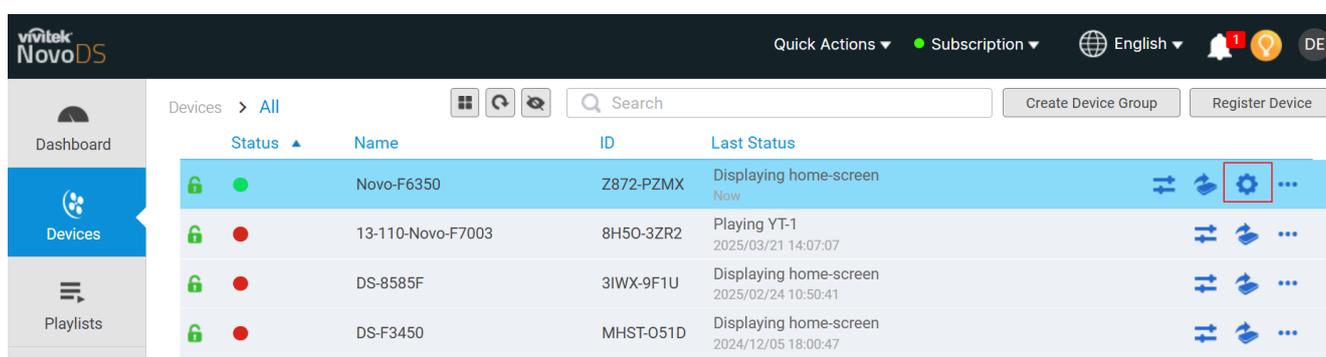

Step3. In the device setting, click the 'Display' icon listed on the top side.

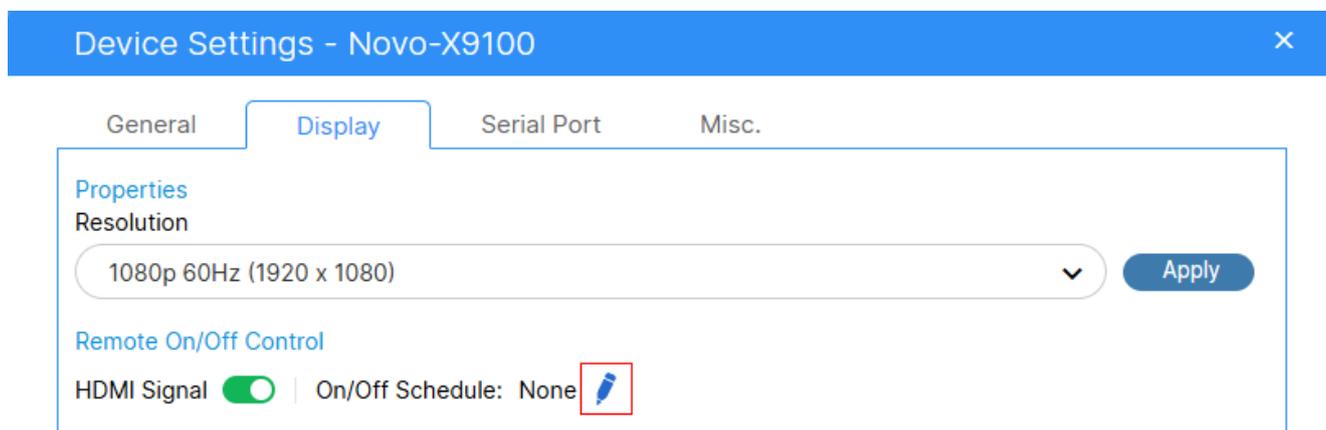

Step4. Click the 'pen' icon; then, the 'created schedule' window will appear on the screen. Select the preferred schedule and then click 'Apply'.

Display On/Off Schedule ×			
Name	Days	Type	Description
<input checked="" type="radio"/> Lab Device	Monday, Tuesday, Wednesday, Thursday, Friday	USB RS232	Power On/Off

Apply

Device Settings - Novo-F6350 ×

General

Properties

Resolution

1080p 60

Remote On/Off Control

HDMI Signal



DEVICE INFORMATION

Device is waiting for command

Apply

On/Off Schedule: None 

Step5. Once the schedule is applied to the device, it will be listed on the settings page.

General

Display

Serial Port

Misc.

Properties

Resolution

1080p 60Hz (1920 x 1080)



Apply

Remote On/Off Control

HDMI Signal



On/Off Schedule:

Sun 08:00 15:00

Mon 08:00 15:00

Tue 08:00 15:00

Wed 08:00 15:00

Thu 08:00 15:00

Fri 08:00 15:00

Sat 08:00 15:00