


How To Set Up A Schedule


This feature allows users to assign a playlist or settings to play at a specific time of day and then apply that schedule to a device or group.

4.1 Creating a schedule


Step1. Click the 'Quick Actions' icon listed on the top side, then a menu pop-on the screen.

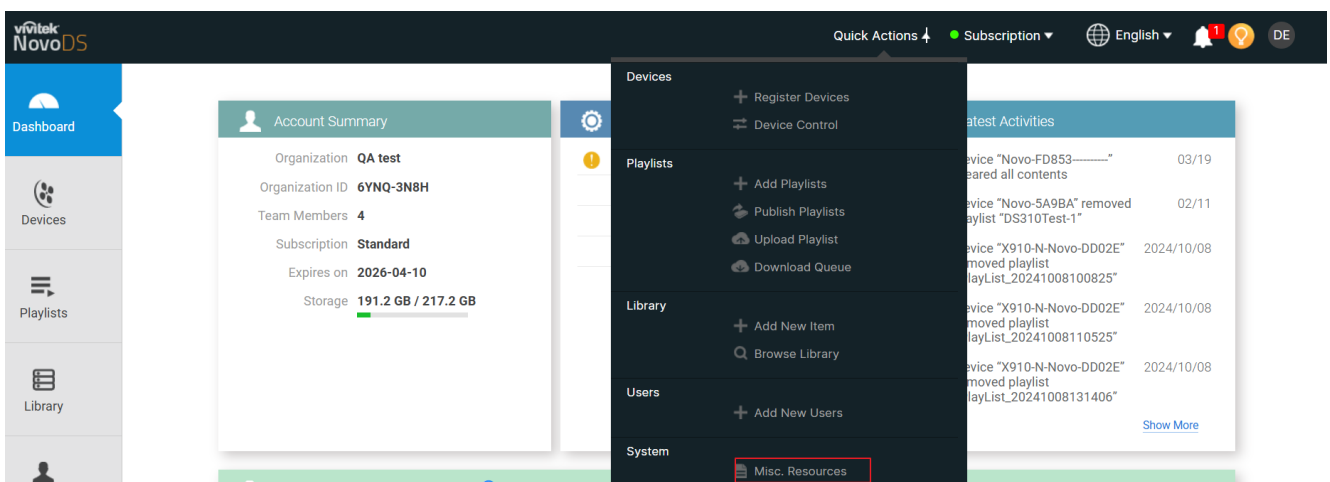

Step2. Click 'Misc. Resources' listed on the bottom (marked in red).

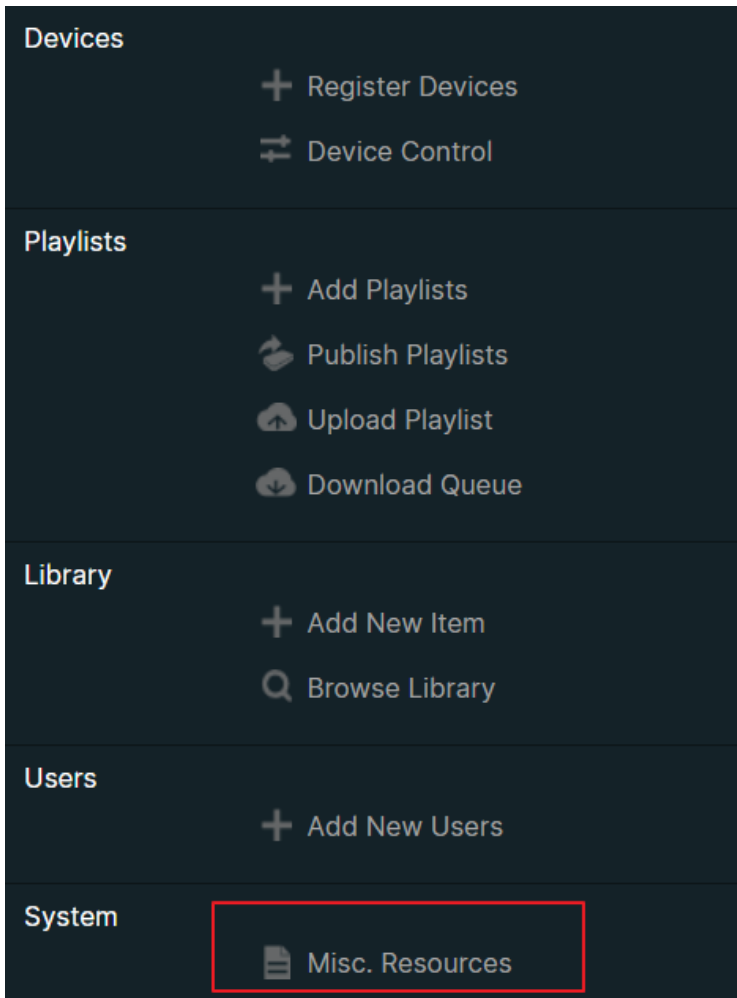

Step3. On this page, there are four features that can be set up. Click the tab 'Display On/Off Schedule' to create a power on/off schedule.

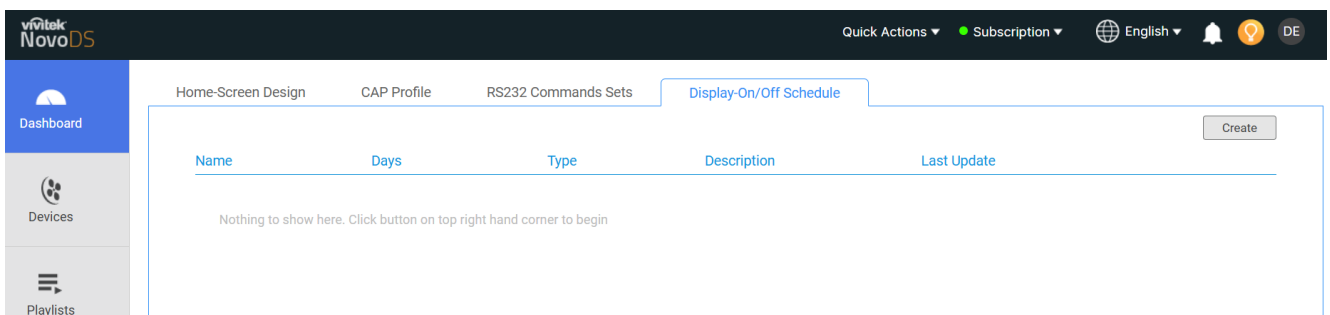

Step4. Click the 'Create' button on the top left side. Then, the 'Create Display On/Off Schedule' window will appear on the screen.

Create Display-On/Off Schedule×

Name	Description
<input style="width: 90%;" type="text"/>	<input style="width: 90%;" type="text"/>

Select Days

<input type="checkbox"/> Monday	<input type="checkbox"/> Tuesday	<input type="checkbox"/> Wednesday	<input type="checkbox"/> Thursday	<input type="checkbox"/> Friday
<input type="checkbox"/> Saturday	<input type="checkbox"/> Sunday			

Via HDMI signal Via serial port command

Time

<input style="width: 80%;" type="text" value="00:00"/>	⏻ Add 'Display ON' command
	⏻ Add 'Display OFF' command

Save

Step5. Within this settings window, you can create a Power On or Power Off schedule and select your preferred days.

Create Display-On/Off Schedule×

Name	Description
<input style="width: 90%;" type="text" value="Lab Device"/>	<input style="width: 90%;" type="text" value="Power On"/>

Select Days

<input type="checkbox"/> Monday	<input type="checkbox"/> Tuesday	<input type="checkbox"/> Wednesday	<input type="checkbox"/> Thursday	<input type="checkbox"/> Friday
<input type="checkbox"/> Saturday	<input type="checkbox"/> Sunday			

Via HDMI signal Via serial port command

Time

<input style="width: 80%;" type="text" value="00:00"/>	⏻ Add 'Display ON' command
	⏻ Add 'Display OFF' command

Save

Step6. To set the 'ON' or 'OFF' time, click the 'Time' button, and a time setting window will appear. After setting the time, click the 'Add Display ON command' button; the setting will then be listed in the window. Repeat this process to set up power off.

Create Display-On/Off Schedule



Name

Lab Device

Description

Power On

Select Days

Monday

Tuesday

Wednesday

Thursday

Friday

Saturday

Sunday

Via HDMI signal Via serial port command

Time

00:00

Add 'Display ON' command

00:00

0

0

Hours



Minutes



Save