

## 2.4 Connect your NovoTouch to your network


### Setting up an Internet Connection


NovoTouch is able to connect to the internet using one of the following methods:

- A wired connection via the RJ-45 port, see the LAN (RJ-45) section for more information.
- A Wi-Fi connection.


### Setting up a Wi-Fi Connection

To set up a Wi-Fi connection:


1. Ensure that the Wi-Fi module is installed in the Wi-Fi module slot. See the [Installing the Wi-Fi Module](#) section for more information.
2. Open the All Apps  menu from the home screen.

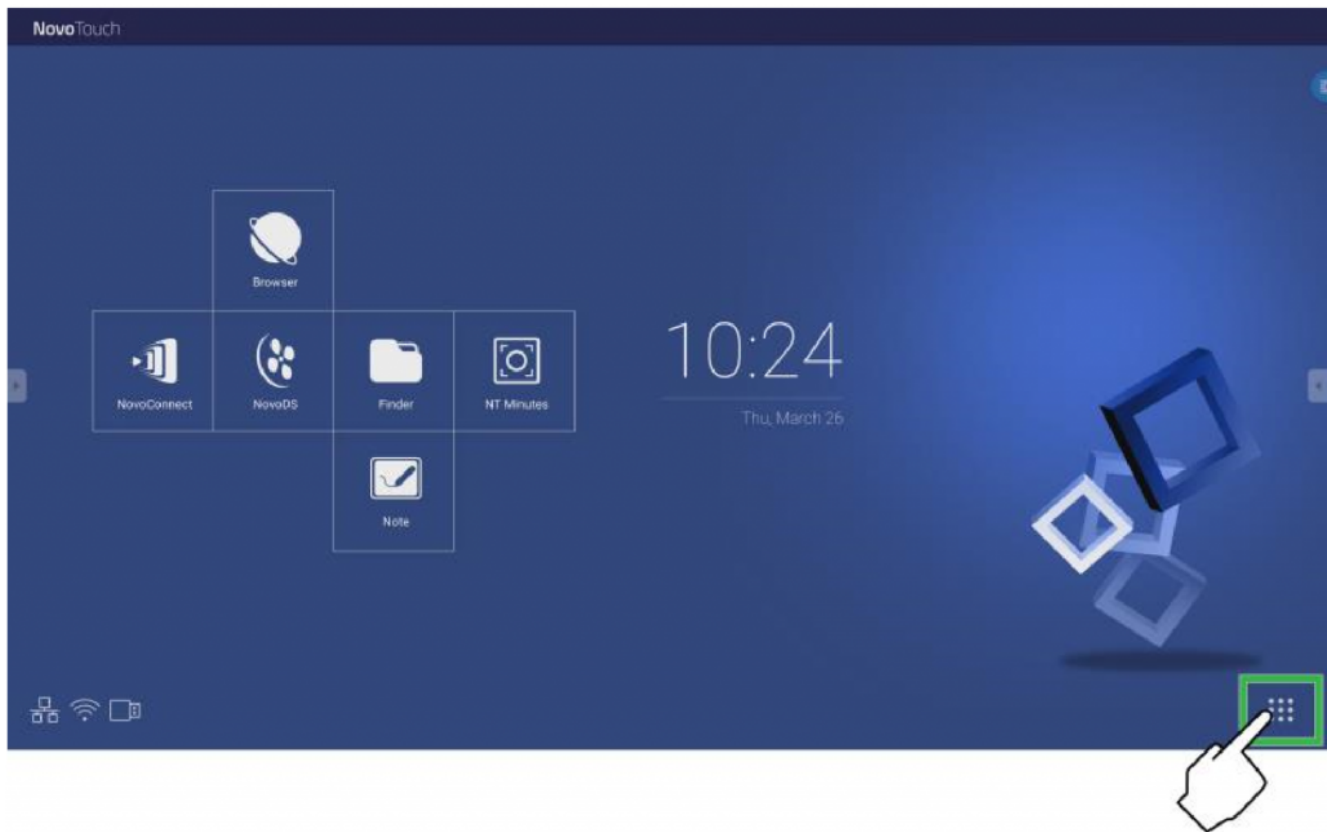

3. Select **NT Settings** in the All Apps menu.

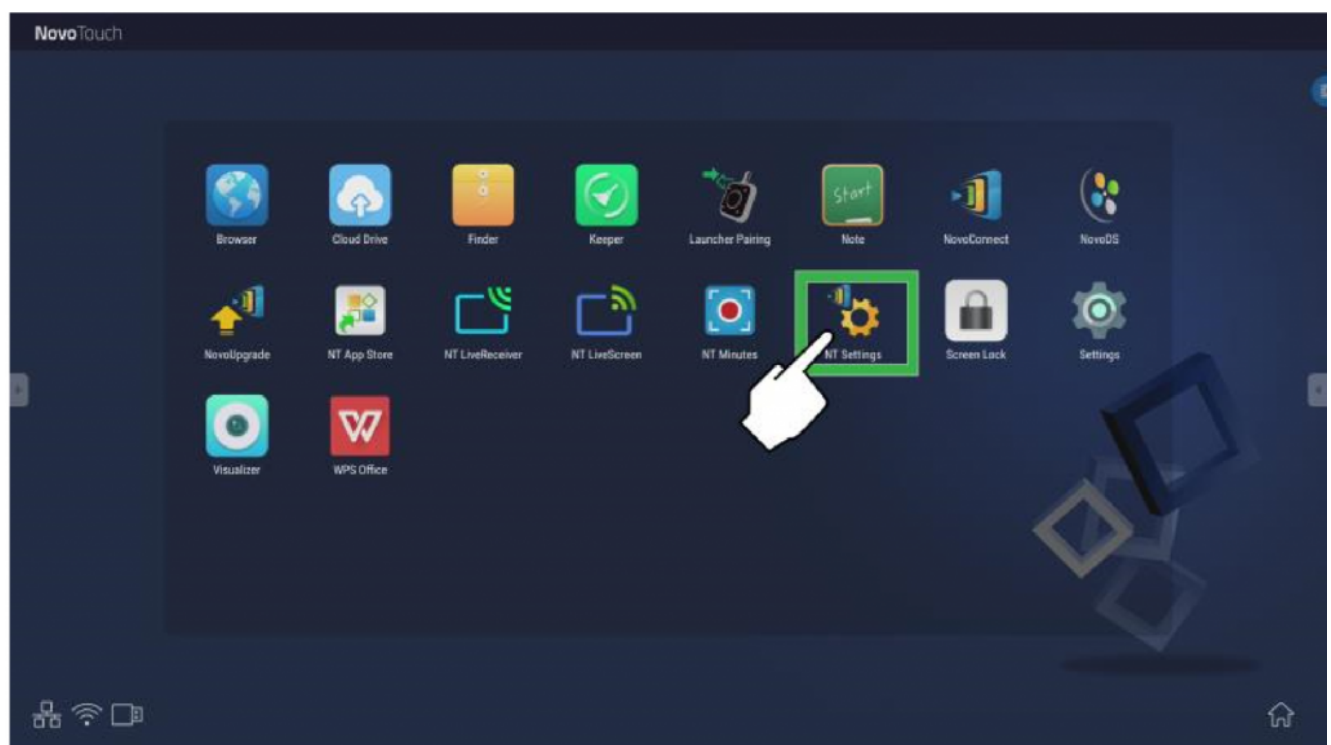


4. Select **Wi-Fi** in the **NT Settings** menu.

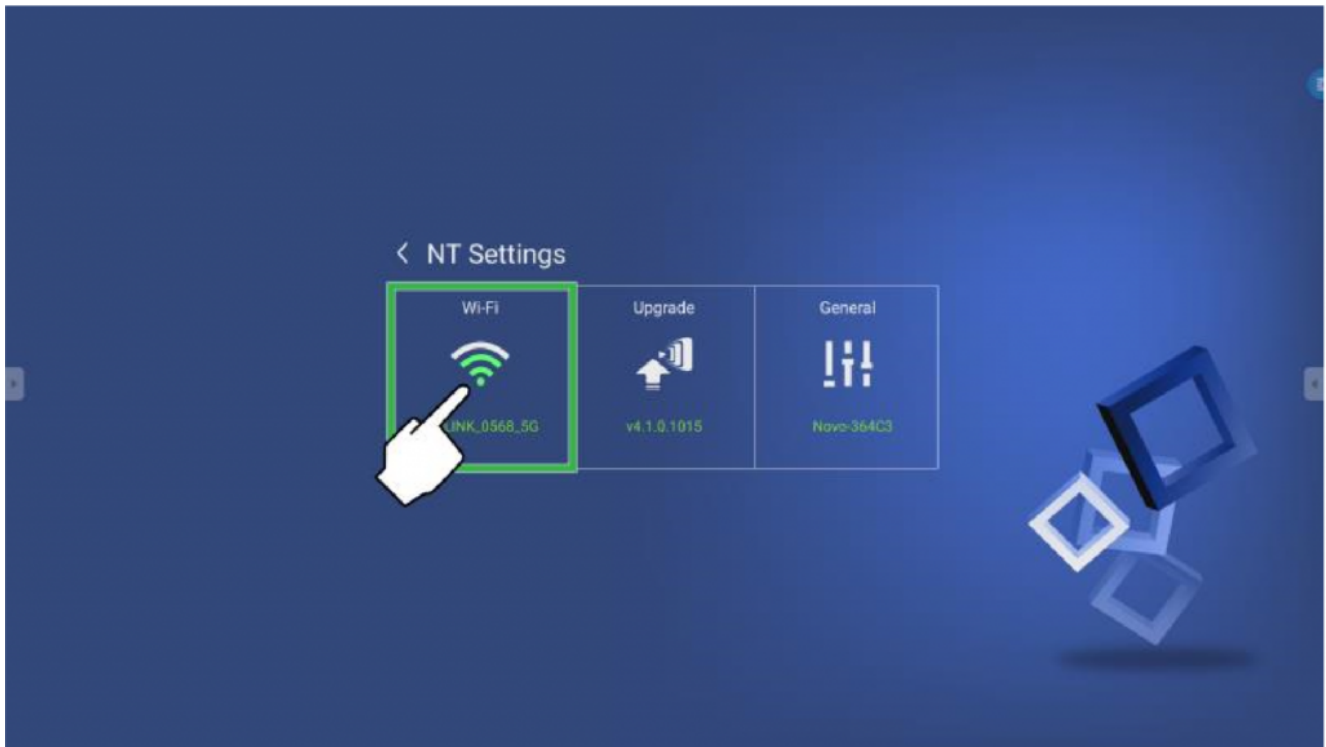


5. Select **Connect to Wi-Fi** in the **Wi-Fi** menu and then select **Configure**.


**NOTE:** If you want NovoTouch to automatically switch to Wi-Fi hotspot mode whenever a Wi-Fi connection is unavailable, check the Use Hotspot if connection fails box.

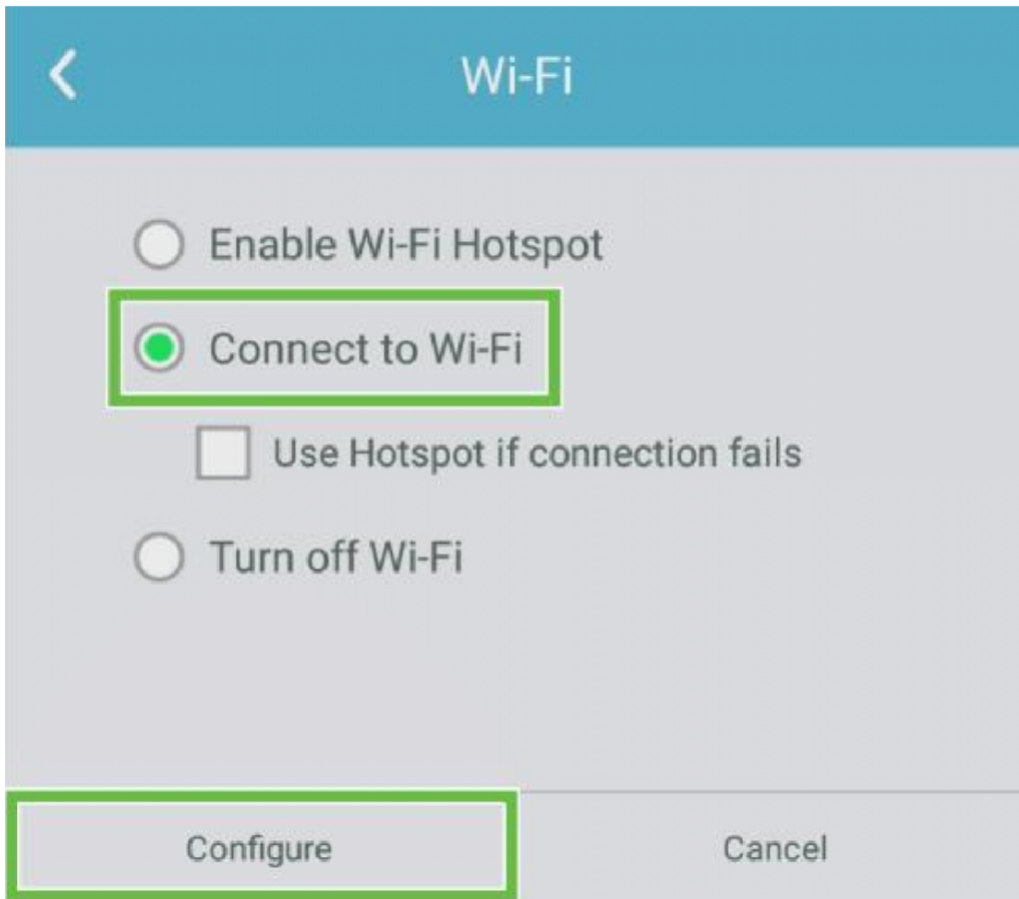

6. Turn the Wi-Fi switch on in the **Wi-Fi** menu.

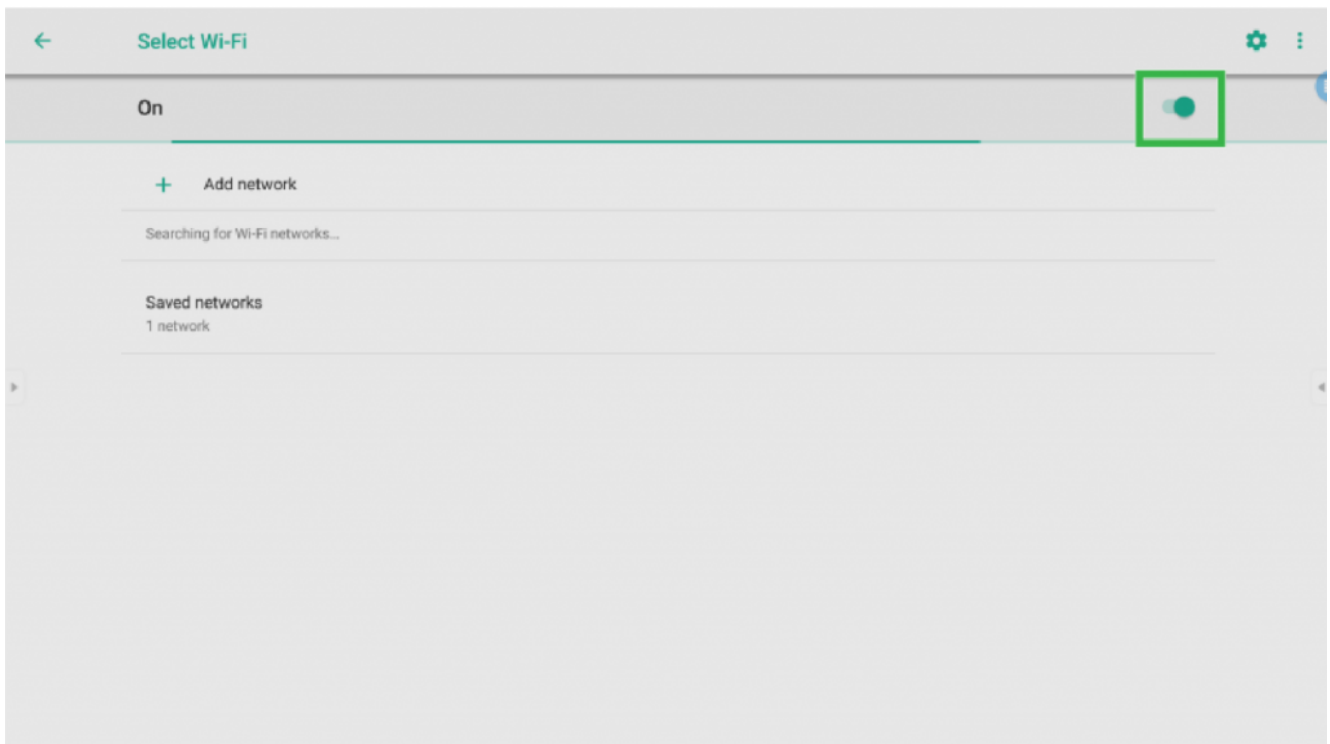

7. Select the Wi-Fi access point/router that you want NovoTouch to connect to.

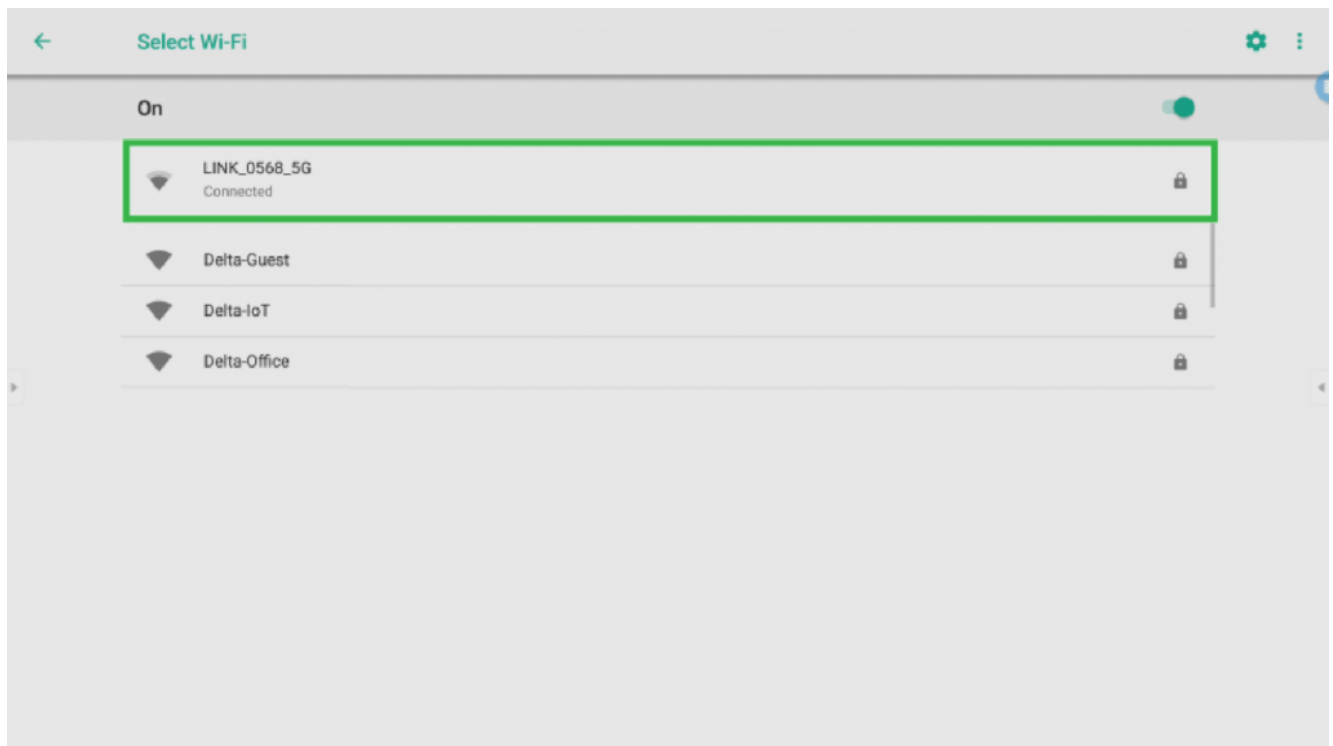

8. Enter a security password if necessary.

The screenshot shows a mobile interface for entering a password. It has a "Password" label at the top left. Below it is a text input field with a green underline. Under the input field is a checkbox labeled "Show password". Below that is a section labeled "Advanced options" with a downward-pointing chevron icon to its right. At the bottom right of the screen are two buttons: "CANCEL" in green and "CONNECT" in gray.